
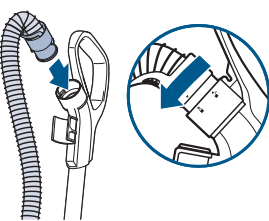


Assembly


Go to support.BISSELL.com for assembly videos.




1. Attach wand to vacuum base.




2. Attach stretch hose to wand and twist clockwise to lock into place.

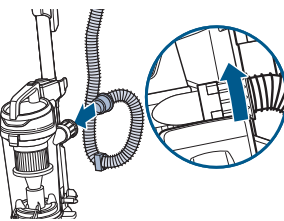


3. Attach stretch hose to back of vacuum and twist clockwise to lock into place.

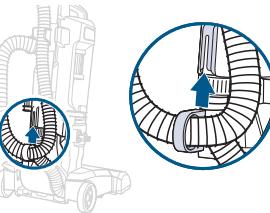

4. Attach hose clip to body of vacuum by sliding up until it clicks into place. Remove hose clip for extended cleaning reach when in use.

 


5. The hose should sit on the vacuum without any twists.

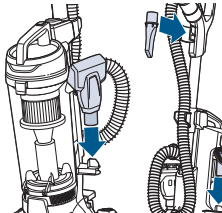


6. Attach tools to tool holders.

Using the Vacuum


For additional support videos and information, visit support.BISSELL.com.

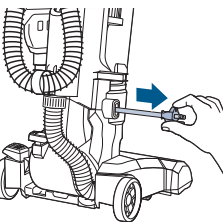

1. Gently pull the cord out, stopping at the yellow mark on the cord. Do not pull past the red mark.

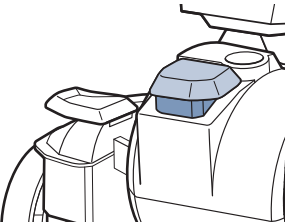


2. Press the red power button with your foot to turn the vacuum ON and OFF.

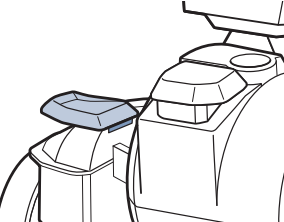


3. Press the recline pedal and pull handle back towards you.

Cleaning the Pre-Motor Filter (continued)

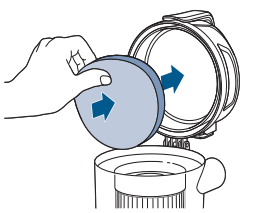

1. Reinstall foam filter and close lid.

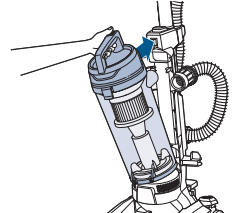

2. Place tank back on vacuum and press firmly until it clicks into place.

Maintaining Your Vacuum

For more helpful maintenance tips, check out support.BISSELL.com.

Maintaining the TurboBrush® Tool

- Twist gray collar counterclockwise until slot appears; separate faceplate and remove brush. Replace belt and brush if needed.
- If paddle wheel is dislodged, align two clips on each side and click into place.
- Faceplate will not close if all parts are not aligned correctly.

Clearing a Clog

- Remove hose from back of vacuum by twisting left. Remove any debris.
- Check foot hose on back of vacuum, towards the bottom. If necessary, remove screw from foot hose and check for clogs.
- Check air passageway on the bottom of vacuum. Remove bottom cover and brush. Remove any debris.

Replacing the Brush and Belt

- Unplug vacuum, turn over and unscrew six Phillips-head screws to remove bottom cover.
- Lift brush roll straight out. Inspect belt, replace if it appears damaged.
- If belt is not broken. Inspect brush roll by placing it on its end and spinning. Brush roll should spin freely, multiple times with one flick. Replace brush roll if it doesn't spin freely.
- Replace brush roll and belt by looping belt over motor shaft and brush roll. Line up endcaps and pull brush forward into place. Belt will stretch.
- Once brush roll is installed, place bottom cover back on and replace screws.

Troubleshooting

For a comprehensive walkthrough of your product and support tips, visit support.BISSELL.com.

WARNING

- To reduce the risk of electric shock, turn power OFF and disconnect plug from electrical outlet before performing maintenance or troubleshooting checks.
- Do not operate vacuum with damp or wet filters or without all filters in place.

Every Purchase Saves Pets™

BISSELL proudly supports BISSELL Pet Foundation® and its mission to help save homeless pets. When you buy a BISSELL® product, you help save pets, too. We're proud to design products that help make pet messes, odors and pet homelessness disappear. Visit BISSELLsavespets.com to learn more.




CLEANVIEW® REWIND UPRIGHT VACUUM
MODELS 3534, 3675, 3676

Important Safety Instructions.....	2
Warranty	2
What's in the Box?	2
Assembly	3
Using the Vacuum	3
Emptying the Dirt Tank.....	5
Cleaning the Pre-Motor Filter.....	5
Maintaining Your Vacuum.....	6
Troubleshooting.....	6

Product Overview

- | | |
|------------------------|-----------------------|
| 1. Handle | 7. Cord Rewind Button |
| 2. Stretch Hose | 8. Power Pedal |
| 3. Wand Release Button | 9. Recline Pedal |
| 4. Tank Release Button | 10. Height Adjustment |
| 5. Carry Handle | |
| 6. Dirt Tank | |

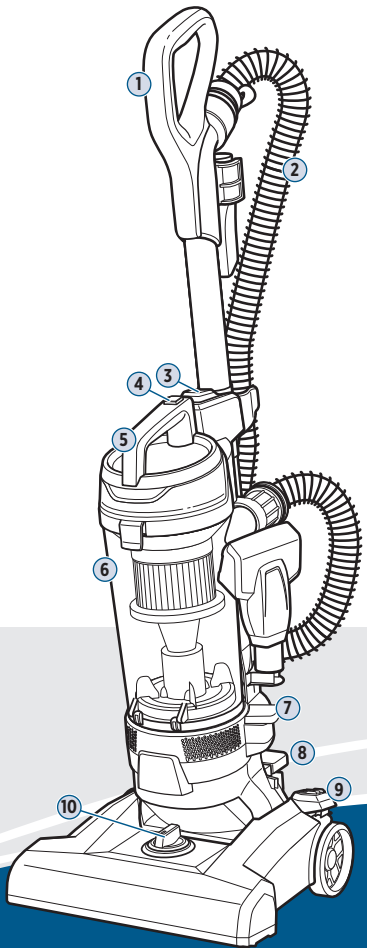

Meet your new BISSELL product!

Go to support.BISSELL.com for a comprehensive walkthrough of your new purchase, including videos, tips, support, and more. Want to get started right away? This guide has all the information you need to set up your new product. Let's take a look...



IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USING YOUR APPLIANCE.
When using an electrical appliance, basic precautions should be observed, including the following:

⚠️⚠️⚠️ WARNING
TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- Do not leave vacuum cleaner when it is plugged in. Unplug from outlet when not in use and before servicing.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Do not use for any purpose other than described in this user guide. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, have it repaired at an authorized service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or vacuum cleaner with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep openings free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Turn OFF all controls before plugging or unplugging vacuum cleaner.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible materials (lighter fluid, gasoline, kerosene, etc.) or use in areas where they may be present.

- Do not use vacuum cleaner in an enclosed space filled with vapors given off by oil-based paint, paint thinner, some moth-proofing substances, flammable dust, or other explosive or toxic vapors.
- Do not use to pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.).
- Do not pick up anything that is burning or smoking, such as cigarettes, matches or hot ashes.
- Do not use without filters in place.
- Do not pick up hard or sharp objects such as glass, nails, screws, coins, etc.
- Use only on dry, indoor surfaces.
- Keep appliance on a level surface.
- Do not carry the vacuum cleaner while it is running.
- Unplug before connecting or disconnecting the Pet TurboBrush® Tool.
- Before using your vacuum, make sure the dirt tank is in locked position and that all filters, both pre- and post-filters, are in place. DO NOT operate your vacuum without these filters.
- Plastic film can be dangerous. To avoid danger of suffocation, keep away from children.
- Do not plug in your vacuum UNTIL you are familiar with all instructions and operating procedures.
- To reduce the risk of electrical shock, turn power switch OFF and disconnect polarized plug from electrical outlet BEFORE performing maintenance or troubleshooting checks.
- Hold plug when rewinding into cord reel. Do not allow plug to whip when rewinding.

SAVE THESE INSTRUCTIONS

THIS MODEL IS FOR HOUSEHOLD USE ONLY.
COMMERCIAL USE OF THIS MACHINE VOIDS THE MANUFACTURER'S WARRANTY.

THIS APPLIANCE HAS A POLARIZED PLUG






 
To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install a proper outlet. Do not change the plug in any way.

Warranty


Limited 2-year warranty, may vary by state. Visit [support.BISSELL.com](https://support.bissell.com) or call 1-800-237-7691 for complete warranty information.


What's in the Box?

Standard accessories may vary by model. To identify what should be included with your purchase, please refer to the "Carton Contents" list located on the carton top flap.

					
Base	Wand	Hose	Crevice Tool	Dusting Brush	Pet TurboBrush® Tool

Using the Vacuum (continued)

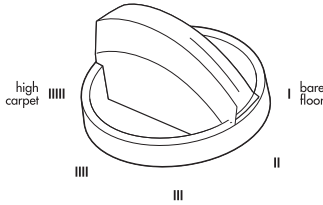

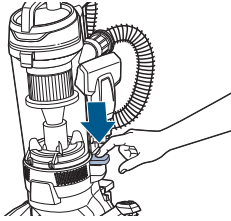

1. Turn dial on foot to desired height setting. If dial is difficult to turn, tilt the vacuum back slightly to take the weight off the foot while turning.

Tip: For best performance, adjust to the lowest practical setting. If your vacuum is difficult to push, adjust to the next higher setting.


2. Hold onto the plug and press automatic cord rewind button until fully retracted. If cord doesn't fully retract on the first try, pull a little bit of cord out and press the rewind button again.


Note: Rotating floor brush continues to rotate while tools are in use. Never place fingers under the vacuum when it is running. Never place powerfoot on furniture or uneven surfaces.


Certain carpets and low humidity conditions may generate small static discharges. Static discharges are entirely harmless and are not associated in any way with the main power supply.

Above Floor Cleaning

Clean hard-to-reach spaces with the Quick Release Extension Wand.

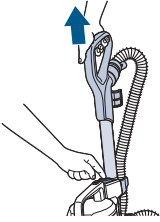

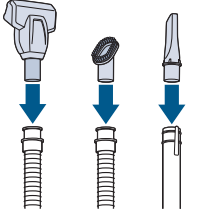

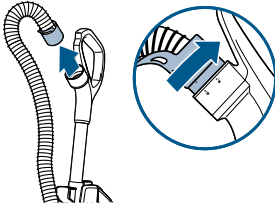

1. Push the release button to remove extension wand and attach desired tool.


2. Attach desired tool.
Note: For optimal performance, attach the Pet TurboBrush® Tool directly to the hose instead of the wand.


3. Twist hose counter-clockwise to remove from handle, if desired. To do so, twist circular hose cuff counter-clockwise and remove from handle.


⚠️ WARNING To reduce the risk of injury from moving parts while the vacuum is turned ON, always move the vacuum via the rolling wheels by using the upper handle at the back of the vacuum. Do not carry the vacuum while it is running. Always place vacuum on floor with handle in upright position when using tools.

Emptying the Dirt Tank

 🔗 We have additional tips for maintaining your machine at [support.BISSELL.com](https://support.bissell.com).

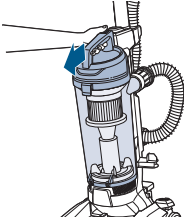

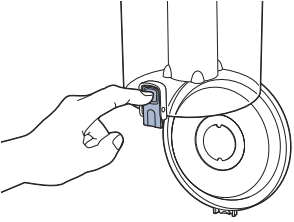






1. Press the tank release button and pull out to remove dirt tank.

2. Hold the dirt tank over a trash bin. Press the bottom release button to empty.

3. Twist cyclone counter-clockwise and pull down to remove from tank.

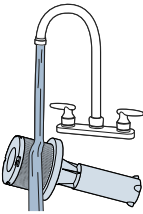

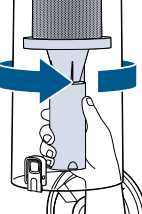

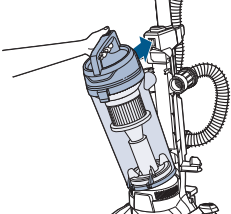


4. Clean cyclone with warm water and mild detergent. Let dry for 24 hours before reinstalling.


5. Twist cyclone clockwise to reinstall.


6. Place tank back on vacuum and press firmly until it clicks into place.

Cleaning the Pre-Motor Filter

🔗 Find replacement filters at [BISSELL.com](https://bissell.com).

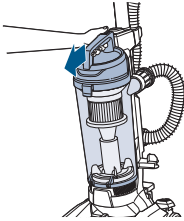

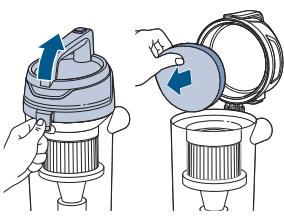

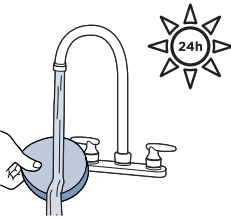

1. Press the tank release button and pull out to remove dirt tank.

2. Lift release latch to access filter. Remove foam filter from lid.

3. Hand wash in warm water and rinse well; mild detergent may be used if desired. Let dry for 24 hours before reinstalling.

⚠️ WARNING To reduce the risk of electric shock, turn power OFF and disconnect plug from electrical outlet before performing maintenance or troubleshooting checks.