


QUICK START GUIDE

 **element** • xumoTV

WHAT'S INCLUDED





Voice Remote

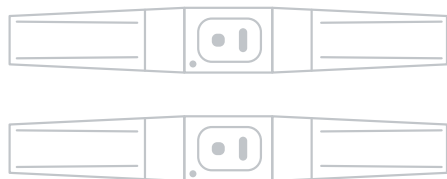

TV Stand

  Stand Screws




**2 AAA
Remote
Batteries**

WHAT YOU'LL NEED (NOT INCLUDED)



Screwdriver
Phillips head

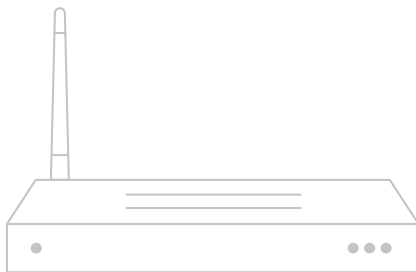

Wireless Router
Needed for streaming



Internet connection
Needed for streaming



Smartphone, computer or tablet
Needed for setup

CONNECT DEVICES TO YOUR TV

Check to ensure that you have selected the right cables for the ports and that they are connected securely (*cables and external devices not included*). Loose connections can affect your picture and audio quality.

ANT



Connect an outdoor or indoor antenna.

HDMI




Connect a Blu-ray or DVD player, gaming console, or other external devices to your TV. Highest quality audio/visual connection.

OPTICAL



Connect an optical cable from an external digital audio system.

HEADPHONE

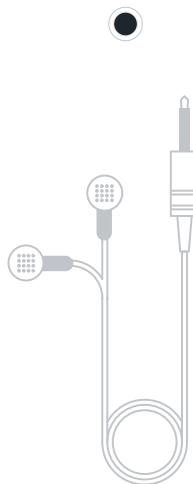

Connect headphones or external speakers.

LAN




Connect an Ethernet cable to access a network or the Internet. The TV also has a wireless connectivity feature.

CONNECT DEVICES TO YOUR TV


(continued)

USB

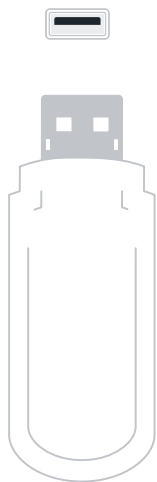

Connect a USB device for browsing photos, music, or videos.

MINI AV IN

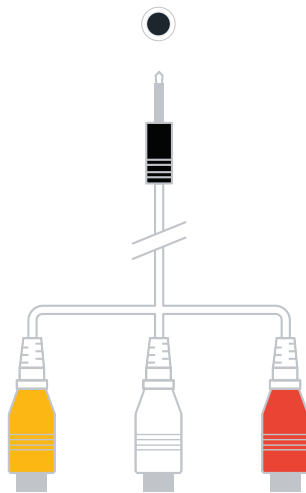


Connect a composite video cable and left-right audio cables from an external AV device (AV adapter included).

VIDEO IN

L


R

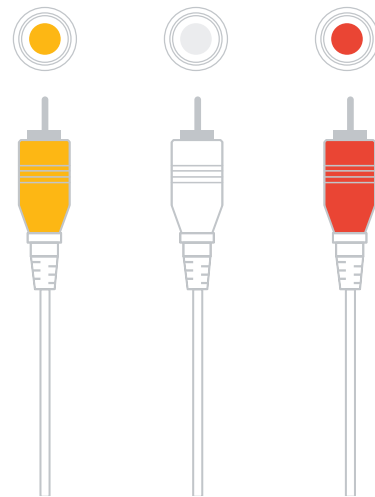

Connect a composite video cable and left-right audio cables from an external AV device.

Actual connections may vary by model. Please refer to the actual product to determine your connection options.

SETTING UP YOUR TV

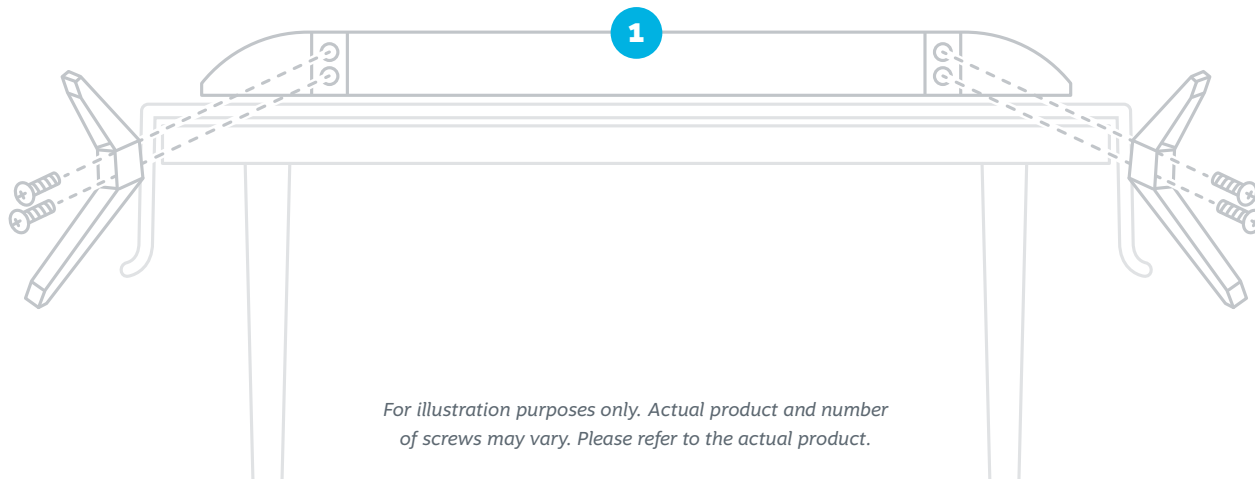

Installing the stands

Do not install the stands if you want to wall mount your TV. See your wall mount instructions for mount installation details.

You will need: Phillips screwdriver (not included)

1. Place the TV screen-down on a clean, flat, soft surface (e.g.: blanket) to prevent scratches or damage to the screen.
2. Use a Phillips screwdriver to attach each stand with the provided screws.
3. Place the TV upright on a stable, level surface.

To avoid damages, never carry your TV by holding or putting pressure onto the glass.

SETTING UP YOUR TV

(continued)

Setting up your remote

Power your TV remote by inserting the included batteries carefully and matching them to the (+) and (-) indicated inside the battery compartment.

Pairing your remote to a new Xumo TV

Before using your remote, you'll need to pair it with your TV. For the easiest pairing process, insert batteries into your remote within 15 minutes of plugging in your TV to initiate automatic pairing. If your remote has trouble pairing, follow these steps:

Pairing your remote to an existing Xumo TV

1. Press and hold the  and  buttons for 2 seconds.
2. If pairing fails, turn off your TV and unplug it from the power source. Plug your TV back in, power on and try step 1 again.



Pairing your remote to a sound system

1. Navigate to Settings by selecting the  at the top of the home screen with your remote.
2. Select **Remote > Pair your remote and sound system**.
3. Follow the on-screen instructions.

How to factory reset your remote

1. Press and hold the  and  buttons for 5 seconds
2. With your remote control pointed towards your TV, try pressing the  button then other keys to make sure your remote is working properly


Note: Voice control will not work until your remote is paired. Voice commands only work when your TV is connected to the internet.

TIP: Always replace dead batteries with two brand new batteries from the same manufacturer. Never use damaged batteries.


If your remote gets warm/hot during use, discontinue use and contact customer support immediately.

SETTING UP YOUR TV

(continued)

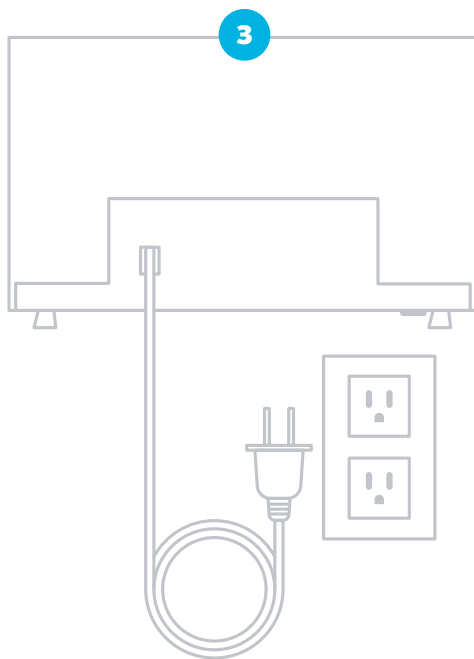

**Power
button**

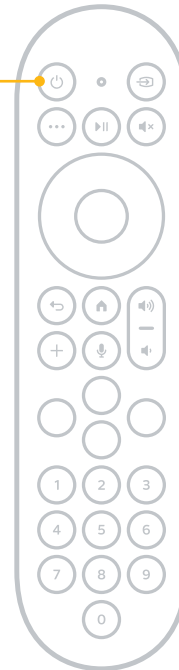


Plug in and turn on TV

Plug your TV into the wall outlet and press the power button on your remote control. Your TV will display a launch screen showing the Element and Xumo TV logos, followed by the first setup screen.

SETTING UP YOUR TV

(continued)

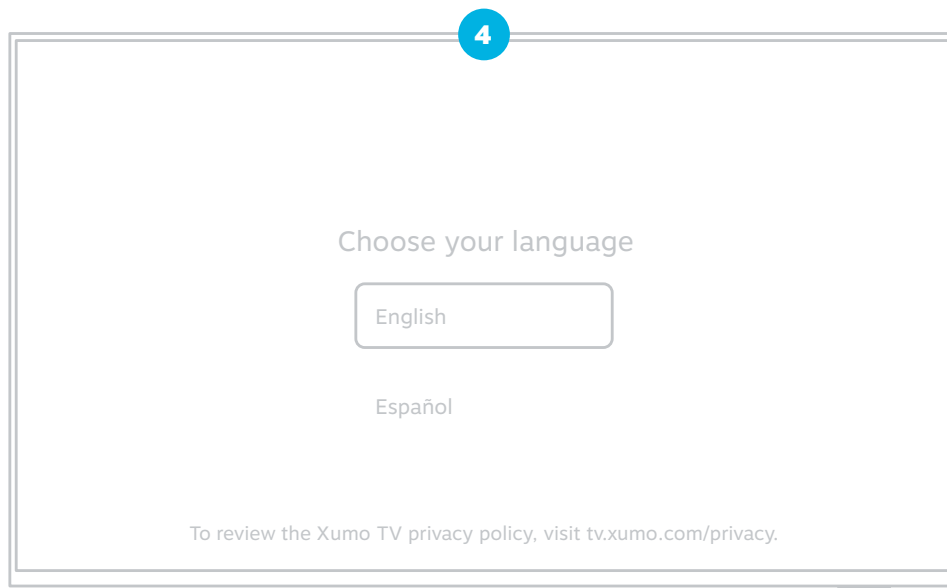

Follow the on-screen instructions

When your TV powers on, follow the easy on-screen instructions for setup.

Connecting your TV to the Internet gives you access to all the things that make your TV smart, including apps, voice controls, and more. Your TV will automatically detect wireless networks in your area, so have your network name and password handy. If you aren't ready to connect to a wireless network you can still use it as a regular TV and can connect it later within settings.

SETTING UP YOUR TV

(continued)




Activate your TV

To activate your TV you'll need a computer, smartphone or tablet. Once you see the activation code on the TV screen you can visit **xumo.com/activate** (or simply scan the QR code on-screen with your smart device camera) and follow the on-screen instructions to complete registration. You'll be directed to the home screen when setup is complete.

You may also create a Xumo account with a payment method if you would like to make purchases on your TV. *Note: Creating a Xumo account and adding payment details is optional and not required to use your TV.*

*A paid subscription or other payments may be required for some streaming channels.
Channel availability subject to change and varies by country or region.*

USING YOUR REMOTE

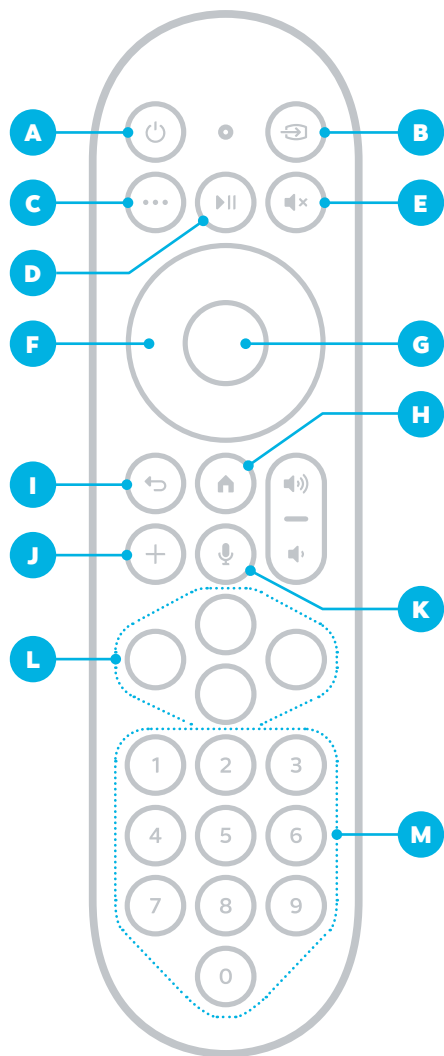


- A Power** Turn your TV on/off
- B Input** Change your TV's input
- C Quick Access** Open a pop-up menu or view contextual information based on your current screen
- D Play/Pause** Play and pause content
- E Mute** Silence your TV's audio
- F Navigation pad** Move up, down, left or right
- G OK** Select an item
- H Home** Return to the home screen or wake your TV
- I Back** Return to the previous screen
- J Add** Add a movie or TV show to My List
- K Voice Control** Navigate your device and find something to watch with voice commands — just press and hold, say a command, then release
- L App Shortcuts** Launch specific apps
- M Number pad** Change channels and input PINs



CONNECTING AN ANTENNA

With the built-in tuner you can connect your TV to an antenna and enjoy over-the-air entertainment.

1. To connect your TV to an antenna, connect a coax cable (not included) into your TV's **ANT** port and the other end into your device.
2. Turn your TV on and press the home button on your remote.
3. Select the **Antenna** tile, or open **Settings** > **Antenna and inputs** > **Antenna** > **Scan for channels**
4. Follow the on-screen instructions.

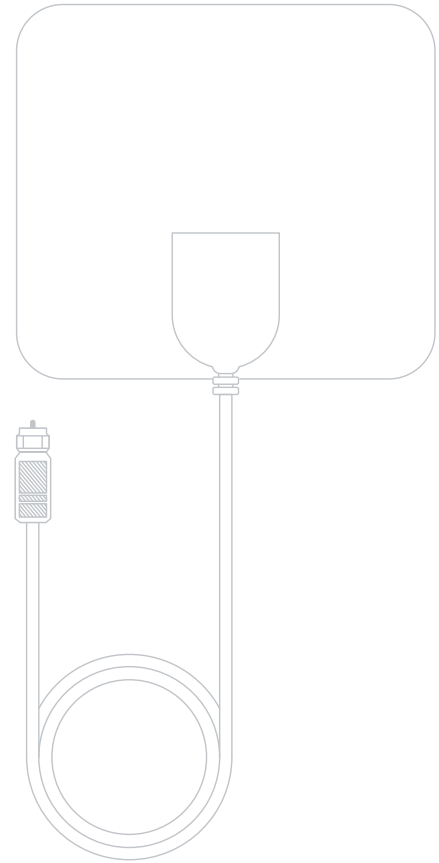

UNIVERSAL REMOTE SETUP

If you prefer to use your cable set-top box or satellite receiver remote as a universal remote, please refer to the manual your cable or satellite service provided. It includes instructions on how to program your remote to your TV.

LET'S REGISTER YOUR PRODUCT



*It's super easy, just head on over to
elementelectronics.com/register*

BENEFITS OF REGISTERING YOUR PRODUCT:



Support

Get assistance quickly
by pre-registering
your product.



News & Offers

Take advantage of the
latest news and special
offers from Element.



Updates

Stay current with
important product updates
and notifications.



Warranty

Receive a 2-year
limited warranty with
registration*

*1-year manufacturer's limited warranty with purchase, or 2-year limited warranty with
product registration within 90 days of purchase. See warranty card for details

FOR SUPPORT, VISIT [ELEMENTELECTRONICS.COM/SUPPORT](https://elementelectronics.com/support)



WE'RE HERE TO HELP

Find resources and get help with product setup, connecting devices, technical issues, downloading manuals and more!

We're available 24 hours a day, 7 days a week



elementelectronics.com



1.888.842.3577



customerservice@elementelectronics.com

To download the full Xumo TV User Manual, and review the latest information on common issues and solutions, visit **tv.xumo.com/support**

We recommend keeping your TV box for the duration of your warranty. See your product warranty for details.

This page left intentionally blank.

FOR SUPPORT, VISIT [ELEMENTELECTRONICS.COM/SUPPORT](https://www.elementelectronics.com/support)





Element, the Element Logo, and Bring it home are trademarks of Element Brand Holding, LLC. ©2024 Element Brand Holding, LLC. All Rights Reserved.
Xumo TV, Xumo Play, the Xumo logos, and all other Xumo product names, logos, slogans or marks are the
trademarks of Xumo or its licensors. ©2024 Xumo. All Rights Reserved.