

# 速查指南

## 滾筒式洗衣機使用方法

 
 
備註：詳情請參考「使用保養手冊」。並非每個行程都提供所有設定和功能選項。

**警告**



**火災危險**

請勿將沾過汽油或其他可燃液體的物品放進洗衣機。  
沒有洗衣機能徹底去除油垢。  
請勿烘乾曾沾有任何油類的物品(包括烹調用油)。  
否則可能導致死亡、爆炸或失火。

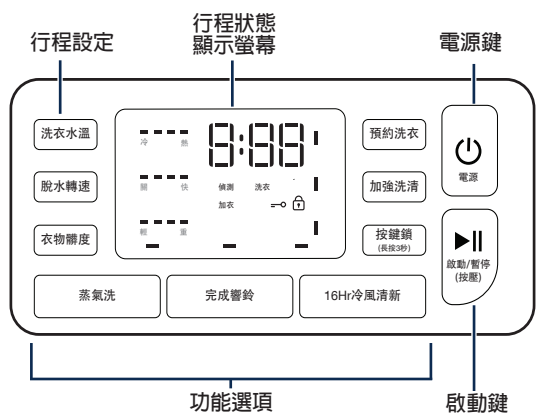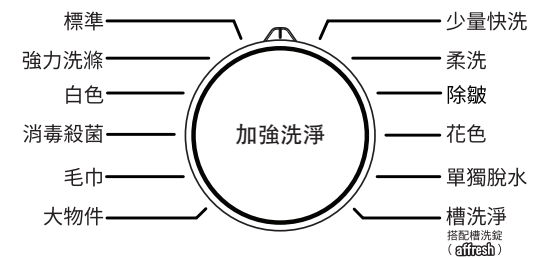

**1 觸碰電源鍵，啟動洗衣機**



**第一次使用之前：**

**2 不加入衣物直接執行洗衣行程**

第一次清洗衣物前請選擇並執行 Quick Wash (快洗) 行程，但不要加入衣物。初次清洗行程的目的是在洗衣前確保機體內部乾淨。

**洗衣：**

 
**3 必要時加入洗衣用品**



裝入衣物前可將 Oxi 類型加強清潔劑、護色漂白劑或香氛結晶放入內桶。

**4 裝入衣物**

將分類好的衣物鬆散的放入洗衣機。  
**重要事項：**請將衣物完全推入洗衣機，確保橡膠圈上沒有任何衣物，以免卡在橡膠圈和門蓋玻璃之間。

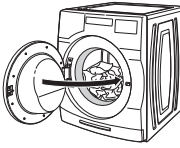


**5 倒入 HE 高效能低泡沫洗衣精**



至於單次衣物投放盒的機型，請在此時將洗衣精倒入適當槽中。

 **6 必要時在投放盒中倒入衣物柔軟精與含氯漂白水**

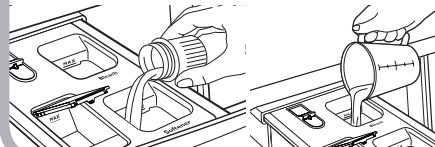

**7 選擇行程**

**8 必要時選擇其他功能選項**




按下旋鈕可選擇 Extra Power (加強洗滌)。其他選項包括：

- Cycle Signal (完成響鈴)
- Fresh Hold (冷風清新)
- Extra Rinse (加強洗滌)
- Delay Start (預約洗衣)
- Steam (蒸氣洗)

如要進一步瞭解這些其他選項，請參考「使用保養手冊」。

**9 觸碰並按住 啟動 即可開始洗衣行程**

觸碰並按住「啟動」3 秒即可開始洗衣行程。如要多放 1~2 件衣物，請點一下「啟動」暫停行程並添加衣物，完成後再觸碰並按住「啟動」可繼續洗衣行程。如要取消行程，請觸碰並按住電源鍵。



**保養**


- 每洗 30 次衣服必須執行一次 Clean Washer 槽洗淨行程。
- 洗衣機不使用時請將門蓋打開通風。
- 每次洗衣前請檢查門蓋內的橡膠圈，如有細碎物品必須清除。

# Quick Reference Guide

## Using Your Front-Loading Washer

**NOTE:** See your Use and Care Guide for more information. Not all settings and options are available on each cycle.

**WARNING**




**Fire Hazard**

Never place items in the washer that are dampened with gasoline or other flammable fluids.

No washer can completely remove oil. Do not dry anything that has ever had any type of oil on it (including cooking oils). Doing so can result in death, explosion, or fire.

**1 TOUCH POWER TO TURN ON WASHER**



**BEFORE FIRST USE:**

**2 RUN WASH CYCLE WITHOUT LAUNDRY**

Before washing clothes for the first time, choose the Quick Wash cycle and run it without clothes. This initial wash cycle serves to ensure the interior is clean before washing clothes.

**DOING LAUNDRY:**


**3 ADD LAUNDRY PRODUCTS, IF DESIRED**



 
Oxi-type boosters, color-safe bleach, or scented crystals can be added to the drum prior to adding laundry.

**4 LOAD LAUNDRY**

Place a load of sorted items loosely in the washer. **IMPORTANT:** Push load fully into the washer. Make sure no items are resting on the rubber seal to avoid trapping them between the seal and the door window.



**5 ADD HE DETERGENT**

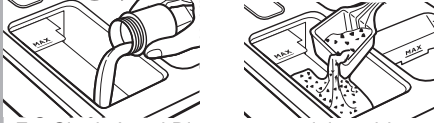


For Single Load Dispenser models, add detergent to the appropriate compartment at this time.

**6 ADD LIQUID FABRIC SOFTENER AND CHLORINE BLEACH TO DISPENSER, IF DESIRED**



 
**7 SELECT A CYCLE**

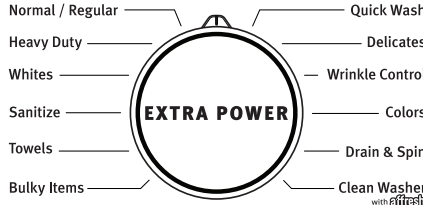

Normal / Regular, Heavy Duty, Whites, Sanitize, Towels, Bulky Items, Quick Wash, Delicates, Wrinkle Control, Colors, Drain & Spin, Clean Washer with affresh

**8 SELECT ANY ADDITIONAL OPTIONS, IF DESIRED**




Press the knob to select Extra Power. Additional options available:

- Cycle Signal
- Extra Rinse
- Steam
- Fresh Hold
- Delay Start

Refer to the User & Care guide for details about these additional options.

 
**9 TOUCH AND HOLD START TO BEGIN WASH CYCLE**

Touch and hold START for 3 seconds to start the wash cycle. To add 1-2 additional garments, pause the cycle by Touching START once to add garments; then touch and hold START again to continue the cycle. To cancel a cycle, touch and hold POWER.



**MAINTENANCE**

- Run Clean Washer cycle every 30 loads.
- Leave door open for ventilation when machine is not in use.
- Check door seal between cycles. Clean out small items and/or debris if present.

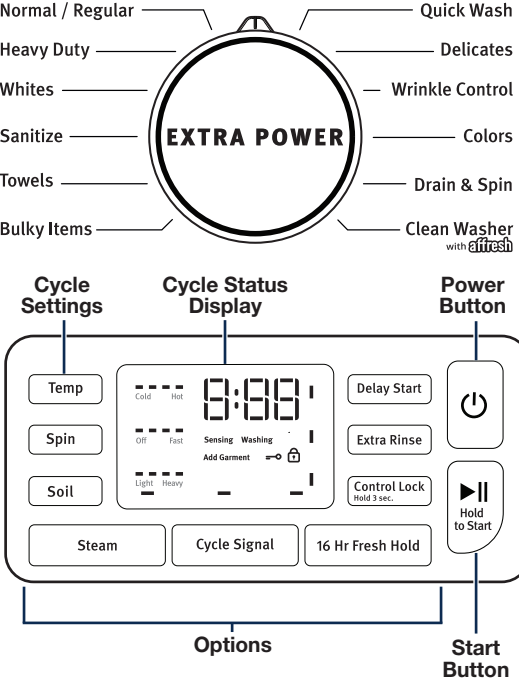

**Cycle Settings:** Temp, Spin, Soil, Steam

**Cycle Status Display:** 8:33, Cold, Hot, Off, Fast, Sensing, Washing, Add Garment, Light, Heavy

**Options:** Delay Start, Extra Rinse, Control Lock (Hold 3 sec.), Cycle Signal, 16 Hr Fresh Hold

**Power Button:** (Power icon)

**Start Button:** (Hold to Start icon)