


# Quick Guide

---

## Location of the surface elements and controls

---

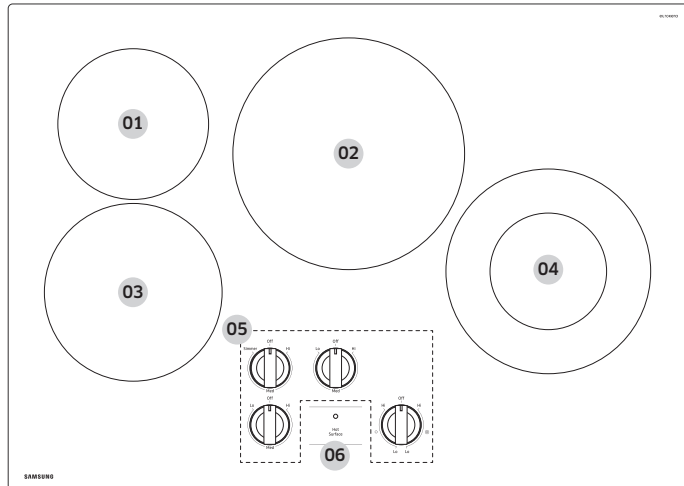

**01** Left Rear (6", 1200 W)

**02** Center (9", 2500 W)

**03** Left Front (7", 1500 W)


**04** Right (5"/8", 2000 W)

**05** Control Knob

**06** Hot Surface indicator

## Knob operation

---

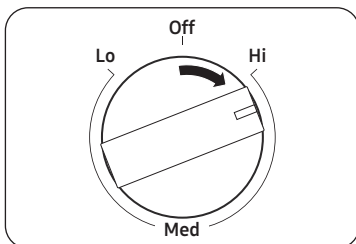


Press and turn the knob to a desired setting.

# Guía rápida

---

## Ubicación de los controles y elementos de la superficie

---

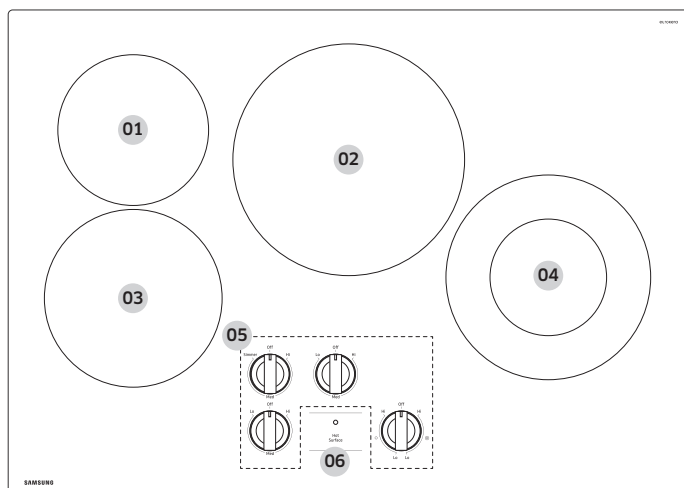

**01** Trasero izquierdo (6", 1200 W)

**02** Central (9", 2500 W)

**03** Delantero izquierdo (7", 1500 W)


**04** Derecho (5"/8", 2000 W)

**05** Perilla de control

**06** Indicador de superficie caliente

## Funcionamiento de la perilla

---

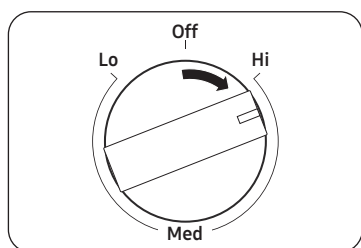


Presione y gire la perilla hasta el ajuste deseado.

# Guide sommaire

---

## Emplacement des foyers et des commandes

---

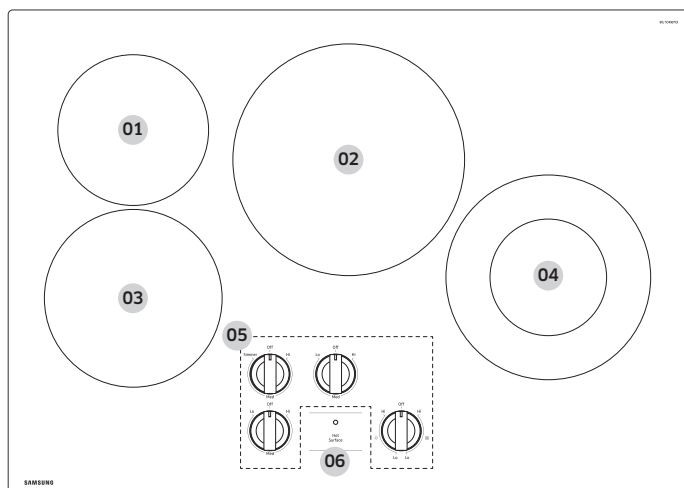

**01** Arrière gauche (6", 1200 W)

**02** Central (9", 2500 W)

**03** Avant gauche (7", 1500 W)


**04** Droit (5"/8", 2000 W)

**05** Bouton de commande

**06** Témoin de surface chaude

## Fonctionnement du bouton

---

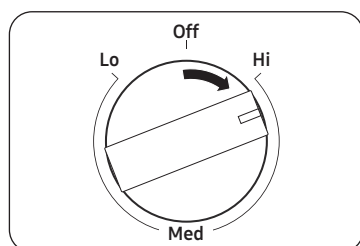

Appuyez sur le bouton et tournez-le sur le réglage souhaité.

**SAMSUNG**



NZ30FG5332RKAA-00