
CONVECTION SPEED OVEN INSTALLATION GUIDE

Components required	3
Accessing your product specifications	4
Unpack product	6
Remove shelves	7
Connect power	8
Position in cavity	10
Align to surroundings	11
secure to cavity	12
Refit shelves	13
Checklist	14

MINIMAL

OM30NMUB3, OM30NMUG3, OM30NMUNB3, OM30NMUNG3

CONTEMPORARY

OM30NCUDX3, OM30NCTDB3, OM30NCTDX3

PROFESSIONAL

OM30NPUX3, OM30NPTX3

COMPONENTS REQUIRED

TOOLS

Not supplied

- ☐ Powered driver
- ☐ Cross-head screwdriver

PARTS



Supplied

- ☐ Screw SD #7X13 PAN PH ZP (2)

ACCESSING YOUR PRODUCT SPECIFICATIONS



For full product, cabinetry and service specifications, refer to the Planning Guide. To access the Planning Guide, scan the QR code or visit fisherpaykel.com/specify. Search by appliance type, product name or model code.

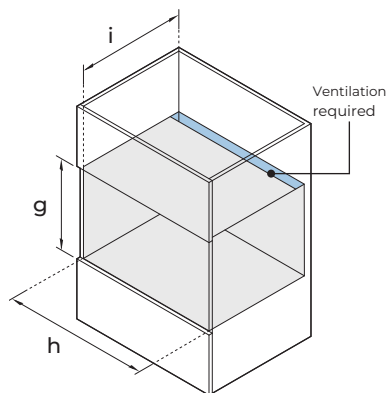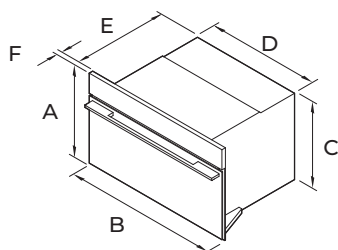

PRODUCT DIMENSIONS	inch	mm
A Overall height	18	458
B Overall width	29 7/8	758
C Chassis height	17 1/8	435
D Chassis width	28 3/8	720
E Chassis depth	21 7/16	545
F Control panel thickness	13/16	20
Minimal and Contemporary models	13/16	20
Professional models	15/16	24

*Measured from front of control panel.

CAVITY DIMENSIONS	inch	mm
A Minimum inside height of cavity	17 5/16	440
B Minimum inside width of cavity	28 1/2	724
C Minimum inside depth of cavity*	21 5/8**	550**
Recommended cabinet height	18 1/8	460
Recommended cabinet width	30	762

*Excluding control panel thickness.


**Requires ventilation at the rear of the cavity.

PRIOR TO INSTALLATION



fisherpaykel.com/specify

1. Refer to the Planning Guide for cabinetry, cavity, panel and service specifications.
For dark cabinetry, ensure clashing has been considered and installed.

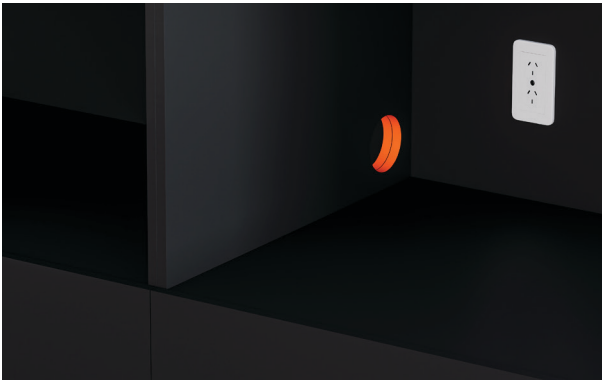

2. Ensure the cabinet meets the minimum cavity specifications required.



3. Ensure ventilation has been set up correctly.

UNPACK PRODUCT

- Do not lift or move the product using the door handle.
 - Keep all packing materials until the unit has been inspected.
 - Inspect the product to ensure there is no shipping damage. If any damage is detected contact the dealer or retailer you brought the product from to report the damage.
 - Fisher & Paykel is not responsible for shipping damage.
-



1. Cut all straps and remove the carton top cap.



2. Lift the carton sleeve and remove any transit packaging. Set aside any accessories.

Dispose of packaging responsibly.

REMOVE SHELVES




1. Open the door and remove all cable ties and packaging holding the oven shelves in place.



2. Grip the shelves at the front. Lift upwards and pull out from the microwave.

CONNECT POWER


FOUR WIRE CONNECTION

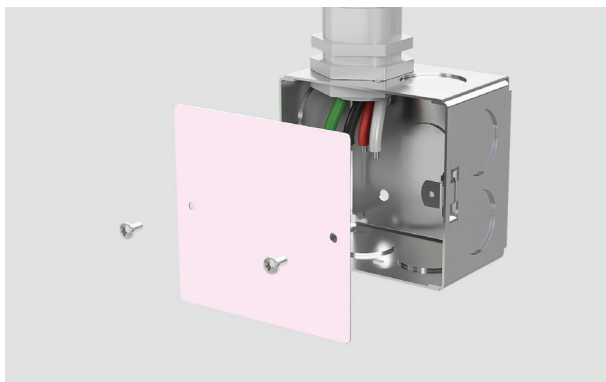

1. Disconnect the power supply and remove the junction box cover.



2. Connect the oven cable to the junction box through the U.L. - listed conduit connector.

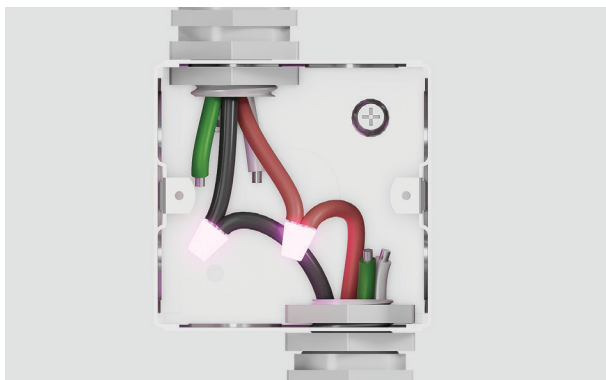


3. Connect the two black wires together with twist-on connectors and the two red wires together with twist-on connectors.


Connect electrical connection according to local codes and ordinances.

CONNECT POWER


FOUR WIRE CONNECTION

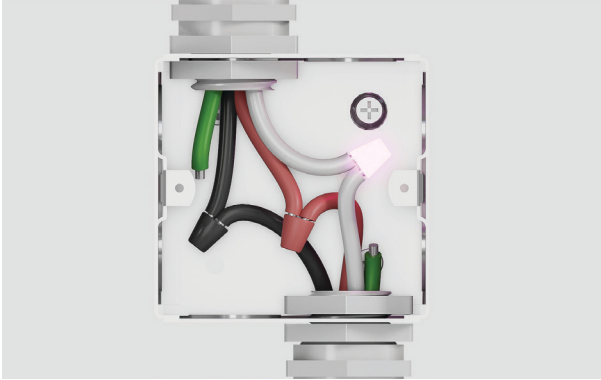

4. Separate the green and white oven cable wires. Connect the white oven cable wire to the neutral (white) wire in junction box.

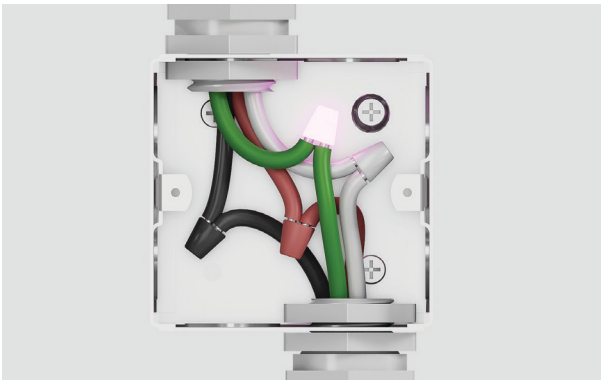


5. Connect the green grounding oven cable wire to the (green) grounding wire in the junction box. Do not connect the green grounding wire to the neutral (white) wire in junction box.

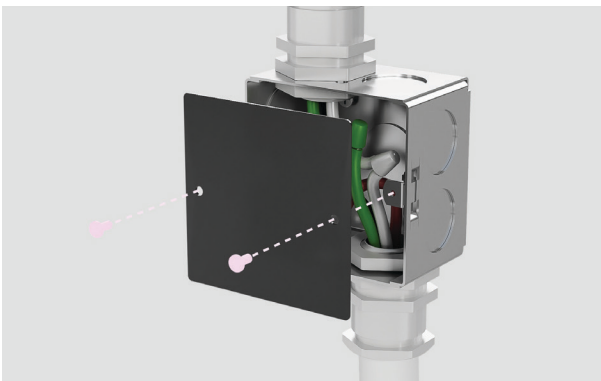

6. Replace the junction box cover.

POSITION IN CAVITY

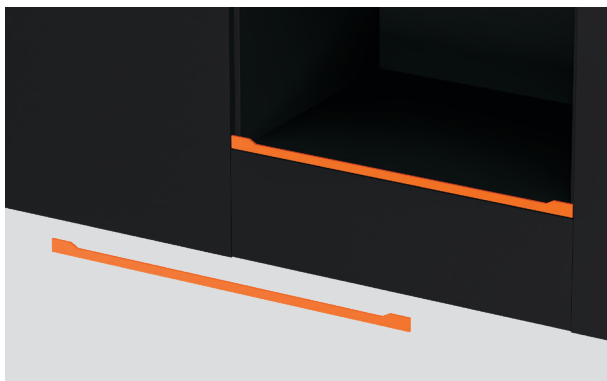

1. For dark cabinetry, the supplied trim can be used to enhance clashing finish. To install, remove the trim adhesive and press to secure to cavity*.



2. Lift product into cavity.

*To purchase cabinetry trim as an optional accessory, visit fisherpaykel.com

ALIGN TO SURROUNDINGS




1. Align microwave with surrounding cabinetry and appliances.




2. Ensure the vertical gaps are even before making any horizontal adjustments.

SECURE TO CAVITY

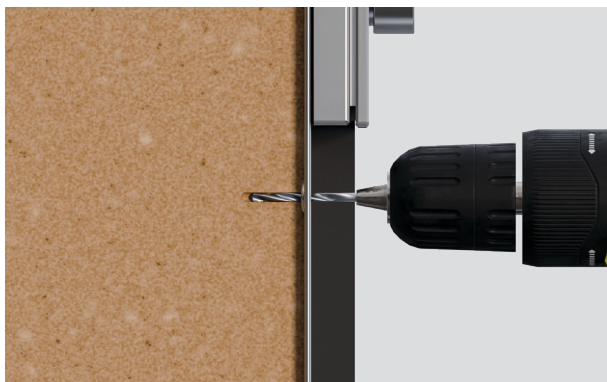

1. Using the product as a guide, pre-drill 2 x 1/8" (3mm) pilot holes.

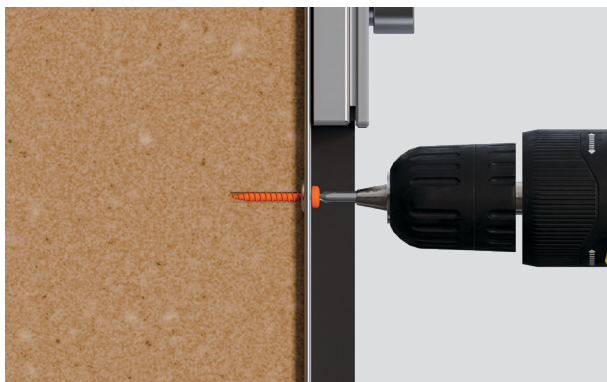

2. Secure oven to cavity using the 2 x screws provided.

REFIT SHELVES



1. Reposition shelves in the oven at the desired level. Ensure shelves are level and correctly positioned with the guard rail at the back.

CHECKLIST

Installation checks

- ☐ All clearances are correct.
- ☐ The product is level and securely fitted in the cabinetry.
- ☐ Ensure all ventilation has been set up correctly.
- ☐ All internal packaging is removed.
- ☐ The isolating switch can be easily reached.

Test operation

- ☐ Turn product on at the power supply.
- ☐ Follow the on-screen guidance to connect the product to WiFi and set the clock.

Complete and keep for safe reference:

Model _____

Serial no. _____

Purchase date _____

Purchaser _____

Dealer address _____

Installer's name _____

Installer's signature _____

Installation company _____

Installation date _____

