

---

# COMBI-STEAM OVEN

## INSTALLATION GUIDE

---

Components required	3
Accessing your product specifications	4
Unpack product	6
Remove door	7
Connect power	9
Position in cavity	14
Refit door	15
Align to surroundings	16
Secure to cavity	17
Refit shelves	18
Checklist	19

**MINIMAL**

OS30SMUB3, OS30SMUG3, OS30SMUNB3, OS30SMUNG3, OS30NMUB3,  
OS30NMUG3, OS30NMUNB3, OS30NMUNG3

**CONTEMPORARY**

OS30SCUDX3, OS30NCUDX3

**PROFESSIONAL**

OS30SPUX3, OS30NPUX3

## COMPONENTS REQUIRED

### TOOLS

#### Not supplied

- Powered driver
- Cross-head screwdriver

### PARTS



#### Supplied

- #8X22 black, wafer head, Phillips, wood screws (2)
- Cabinetry trim (Part number: 553062)

# ACCESSING YOUR PRODUCT SPECIFICATIONS



For full product, cabinetry and service specifications, refer to the Planning Guide. To access the Planning Guide, scan the QR code or visit [fisherpaykel.com/specify](http://fisherpaykel.com/specify). Search by appliance type, product name or model code.

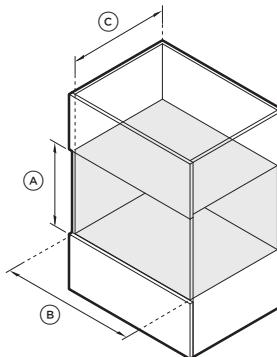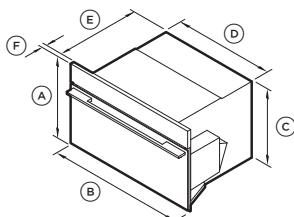

PRODUCT DIMENSIONS	in	mm
(A) Overall height	18	458
(B) Overall width	29 7/8	758
(C) Chassis height	17 1/8	435
(D) Chassis width	28 3/8	720
(E) Chassis depth	21 7/16	545
(F) Control panel thickness		
Minimal and contemporary models	13/16	20
Professional models	18 1/8	24

CAVITY DIMENSIONS	in	mm
(A) Minimum inside height of cavity	17 5/16	440
(B) Minimum inside width of cavity	28 1/2	724
(C) Minimum inside depth of cavity*	21 5/8	550
Recommended cabinet height	18 1/8	460
Recommended cabinet width	30	762

\*Measured from front of chassis.

## PRIOR TO INSTALLATION



[fisherpaykel.com/specify](http://fisherpaykel.com/specify)

**1.** Refer to the Planning Guide for cabinetry, cavity, panel and service specifications.

For dark cabinetry, ensure clashing has been considered and installed.



**2.** Ensure the cabinet meets the minimum cavity specifications required.

The cabinet must be level and square to prevent the need for product adjustments such as shimming.

## UNPACK PRODUCT

- Do not lift or move the product using the door handle.
- Keep all packing materials until the unit has been inspected.
- Inspect the product to ensure there is no shipping damage. If any damage is detected contact the dealer or retailer you brought the product from to report the damage.
- Fisher & Paykel is not responsible for shipping damage.

---



1. Cut all straps and remove the carton top cap.



2. Lift the carton sleeve and remove any transit packaging. Set aside any accessories.

Dispose of packaging responsibly.


## REMOVE DOOR



1. Open the door and remove all cable ties and packaging holding the oven shelves in place.



2. Grip the shelves at the front, making sure to hold the wire shelf and frame together. Lift upwards and pull out from the oven.

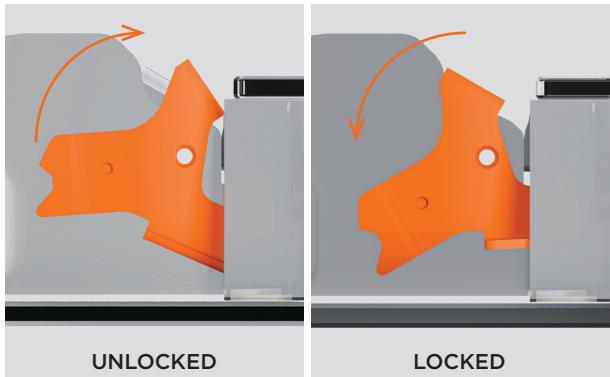

3. Locate the hinge locks on either side of the door. Push the locks upwards to release. Slight resistance when turning the locks is expected.


## REMOVE DOOR



4. Holding the door on both sides, partially close the door and carefully pull the door away from the hinges.

## CONNECT POWER

### THREE WIRE CONNECTION

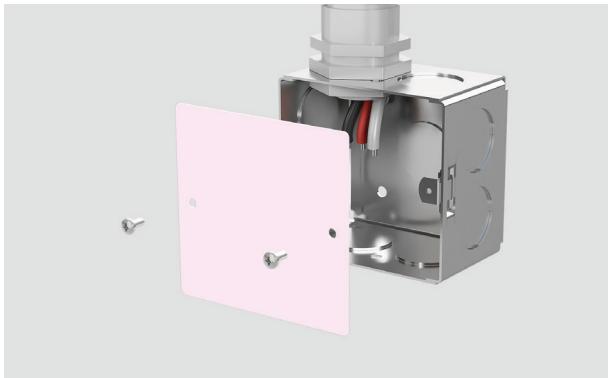

1. Disconnect the power supply and remove the junction box cover.



2. Connect the oven cable to the junction box through the U.L.-listed conduit connector.



3. Connect the two black wires together with twist-on connectors and the two red wires together with twist-on connectors.

Connect electrical connection according to local codes and ordinances.


## CONNECT POWER

### THREE WIRE CONNECTION

If local codes DO NOT PERMIT connecting the cabinet-grounding conductor to the neutral (white) wire in junction box.



1. Separate the factory-taped green and white oven cable wires. If junction box is grounded, connect the green wire to the metal junction box with a screw before connecting the white oven cable wire to the neutral (white) wire in junction box.

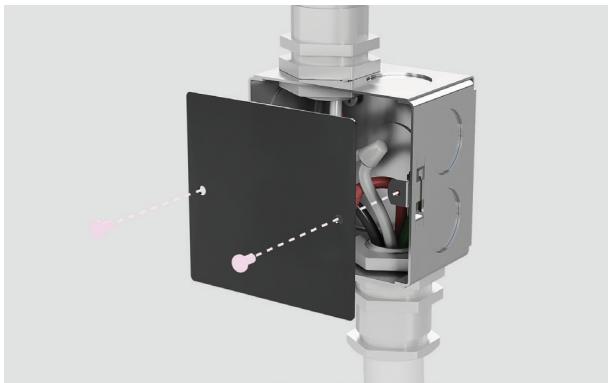

2. Replace the junction box cover.


## CONNECT POWER

### THREE WIRE CONNECTION

If local codes permit connecting the cabinet-grounding conductor to the neutral (white) wire in junction box.




1. Connect the factory-taped green and white oven wires to the neutral (white) wire in the junction box.

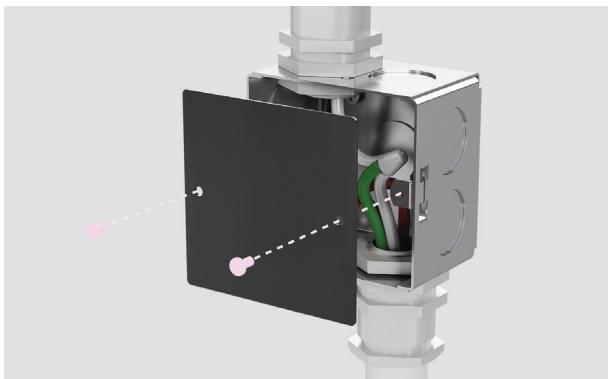

2. Replace the junction box cover.

## CONNECT POWER

### FOUR WIRE CONNECTION

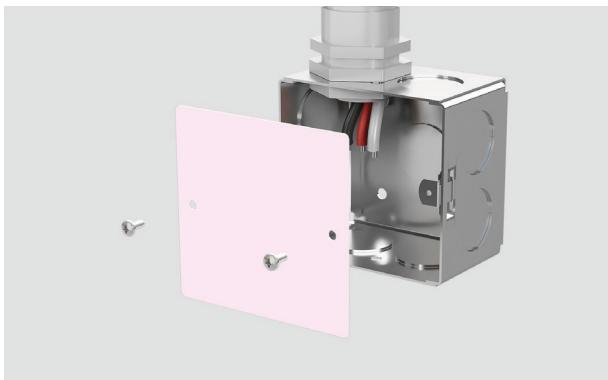

1. Disconnect the power supply and remove the junction box cover.



2. Connect the oven cable to the junction box through the U.L.-listed conduit connector.



3. Connect the two black wires together with twist-on connectors and the two red wires together with twist-on connectors.

Connect electrical connection according to local codes and ordinances.

## CONNECT POWER


### FOUR WIRE CONNECTION



1. Separate the green and white oven cable wires. Connect the white oven cable wire to the neutral (white) wire in junction box.




2. Connect the green grounding oven cable wire to the (green) grounding wire in the junction box. Do not connect the green grounding wire to the neutral (white) wire in junction box.

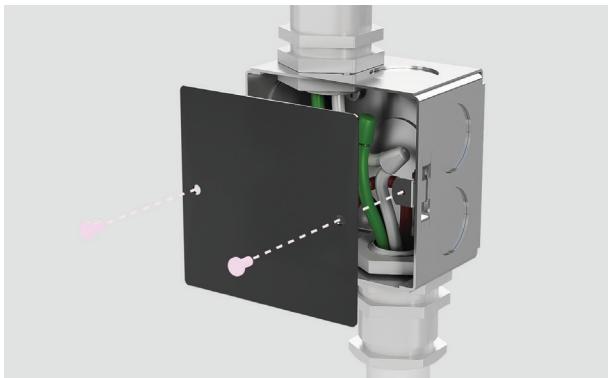

3. Replace the junction box cover.

## POSITION IN CAVITY

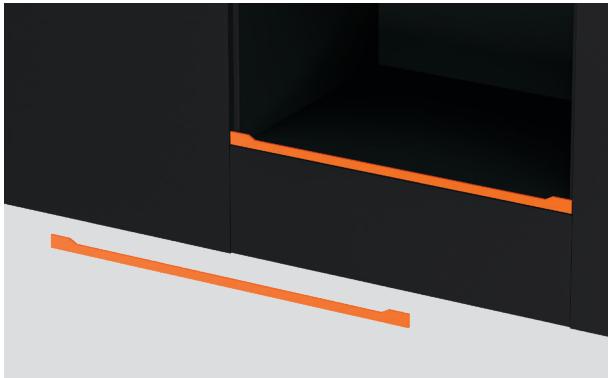

**1.** For dark cabinetry, the supplied trim can be used to enhance clashing finish. To install, remove the trim adhesive and press to secure to cavity\*.




**2.** Apply protective tape to adjacent cabinetry panels before lifting product into place.

\*To purchase cabinetry trim as an optional accessory, visit [fisherpaykel.com](http://fisherpaykel.com)


## REFIT DOOR



1. Holding the door on both sides, carefully lift door back onto the hinges.

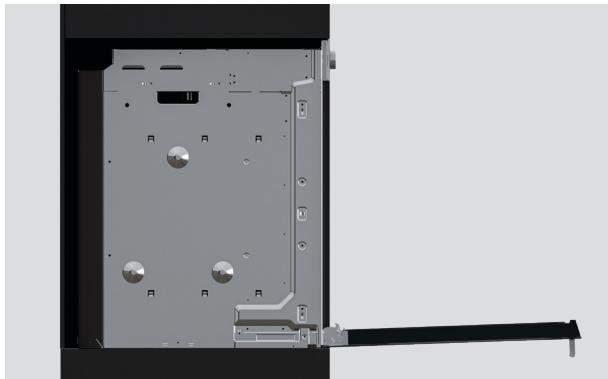

2. Open the door fully and push each locking lever down and lock into place.

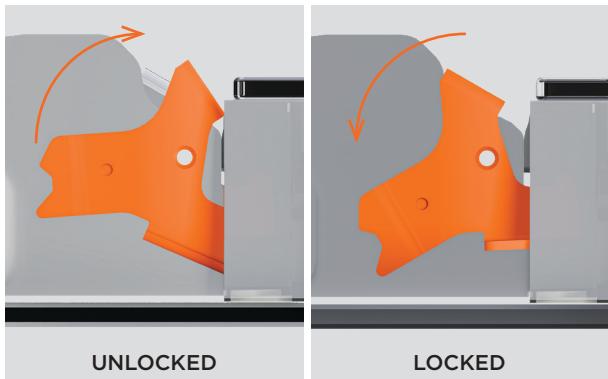

3. Ensure both hinges are fully locked before shutting the door.

## ALIGN TO SURROUNDINGS




**1.** Align oven with surrounding cabinetry and appliances.




**2.** Ensure the vertical gaps are even before making any horizontal adjustments.

## SECURE TO CAVITY

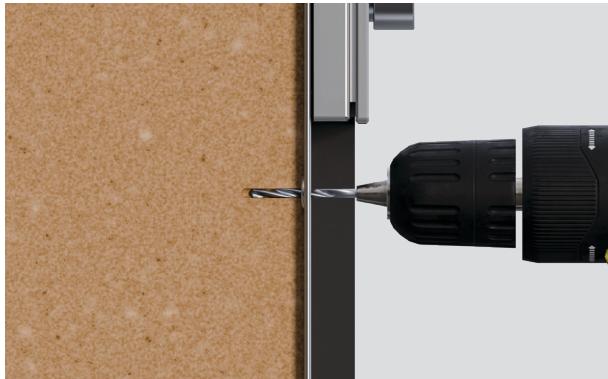

1. Using the product as a guide, pre-drill 2 x 3mm pilot holes.

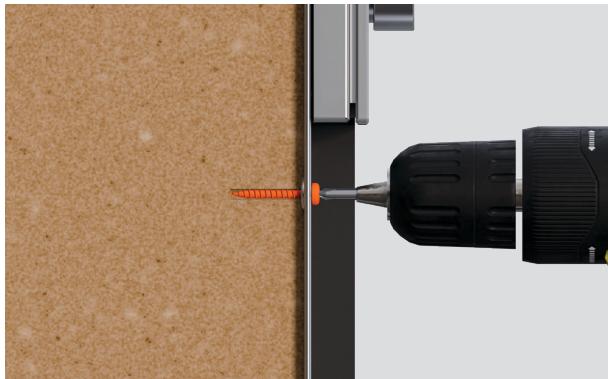

2. Secure oven to cavity using the 2 x screws provided.

## REFIT SHELVES



1. Refit all shelves.

# CHECKLIST

## Installation checks

- All clearances are correct.
- The product is level and securely fitted in the cabinetry.
- Check the lower trim is undamaged.
- All internal packaging is removed.
- The isolating switch can be easily reached.

## Test operation

- Turn product on at the power supply.
- Follow the on-screen guidance to connect the product to Wi-Fi and set the clock.

Complete and keep for safe reference:

Model	_____
Serial no.	_____
Purchase date	_____
Purchaser	_____
Dealer address	_____
Installer's name	_____
Installer's signature	_____
Installation company	_____
Installation date	_____

