

## Get started with your **Electric cooktop**



### BEFORE YOU START



#### REMOVE PACKAGING

Remove all packaging material and tape. Check out your Use & Care Manual for tips to help care for your cooktop.



 
#### USE A COOKTOP CLEANER

Apply a ceramic cooktop cleaning cream to the cooktop and buff with a clean paper towel to help prevent scratches.



#### MATCH COOKWARE SIZE TO THE COOKING ELEMENT




For best results, use cookware that matches the size of the cooking element.

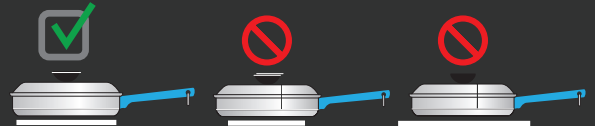


### USING YOUR COOKTOP

#### ELEMENT STYLES.

   - 1. Single Element-** This element has one circle. Be sure to place the correct size cookware on the element. To turn on, rotate its knob in a single direction from low to high.
- 2. Simmer to Boil Element-** Use this element when you want to quickly heat and cook large amounts of food in a large pot. To turn on, rotate the knob in a single direction from low to high.
- 3. Bridge Element-** A bridge element allows you to use an extra-long piece of cookware such as a griddle on one side of your cooktop.

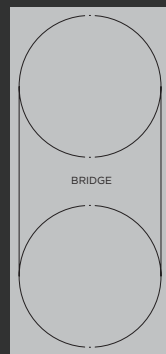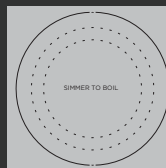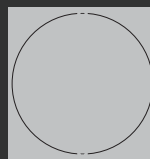


 - 4. Warm Zone-** A keep warm element (some models) has one small circle. It is used to keep food warm after cooking. The keep warm element is not designed to cook food.

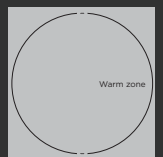

#### KNOB LIGHTS.

 
Each control knob features a backlight that indicates whether a cooktop surface element is ON or HOT.

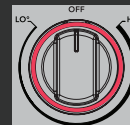

A white glow means the element is ON.



 A red glow means the element is HOT.

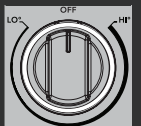

The red backlight will glow when the element is still hot enough to cause burns and will remain on after the element is turned off until the surface has cooled to a safe temperature.



#### REMEMBER

- Be careful! Surface elements may be hot even though they appear cool.

## QUICK CARE

### Cleaning the cooktop



Protect your cooktop by quickly cleaning up spills when they happen. Before cleaning the cooktop, be sure the controls are turned OFF and the cooktop is cool. Use cleaning products that have been specifically designed for ceramic glass cooktops. You can also use a soft cloth, mild dish detergent and water or a 50/50 solution of vinegar and water. Refer to your Use & Care Manual for more care and cleaning recommendations.

### Cleaning the knobs



Remove knobs from the cooktop before cleaning. Using a soft cloth, clean knobs with mild dish detergent and water or a 50/50 solution of vinegar and water. Refer to your Use & Care Manual for special instructions on how to remove and reinstall the knobs on the cooktop.

### A little love goes a long way



Quick ongoing care keeps your range working great for years to come! Clean with warm water and mild soap, or try our line of Frigidaire ReadyClean™ cleaners, available on our website.



## FAQs

### Why does the element come on and then go off?

The element temperature rises gradually and evenly. As the temperature rises, the element will glow red. To keep at the selected temperature, the element will cycle on and off. The heating element retains enough heat to provide a uniform and consistent heat during the off cycle.

### Why are there streaks or metallic marks on my cooktop?

Sliding or scraping of metal utensils on cooktop surface can cause streaks or metallic marks to form. To avoid this, do not slide metal utensils on the cooktop surface. Remove marks by applying a cooktop cleaning creme and buffing with a non-abrasive cloth or sponge.

### How do I clean the knobs?

First, be sure to remove the knobs from your cooktop before cleaning. Do not place knobs in the dishwasher or soak them. Instead, clean the knobs with a soft cloth and mild dish detergent and water or a 50/50 vinegar and water solution.



Find more troubleshooting tips in the back of your Use & Care Manual and [Frigidaire.com](http://Frigidaire.com).

## LET'S MAKE IT OFFICIAL!

Take the first step to becoming a part of the Frigidaire family by registering your new cooktop.

Look for the "SIMPLY SCAN TO REGISTER" label on your appliance or refer to the supplied registration card.

WE ARE  
**here**  
FOR YOU



Have a question?



Want help?



Need service?

**owner support**

**frigidaire.com 1 (800) 374-4432**

**frigidaire.ca 1 (800) 265-8352**

