
LG WASHTOWER™ CYCLE & FABRIC CARE GUIDE

Built-in sensors use AI technology to select the right wash motions, temperatures and more for advanced fabric care. Or, choose from a wide range of custom wash and dry cycles.

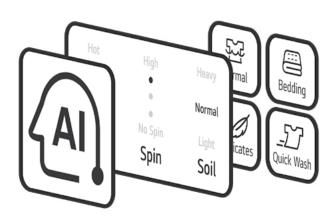

Get a fast start by choosing one of the pre-loaded wash and dry cycles.

	WASH CYCLES	CYCLE DESCRIPTION	
PRE-LOADED CYCLES	Normal*	Mixed loads and cotton or linen fabrics	
	Bedding	Bulky items, pillows, blankets or comforters	
	Delicates	Lingerie, sheer or easily damaged fabrics	
	Heavy Duty	Heavily soiled laundry, especially cotton fabrics	
	Quick Wash	Lightly soiled clothing or small loads	
	Tub Clean	Designed to clean the inside of the washer	

DRY CYCLES		CYCLE DESCRIPTION	
	Normal	Mixed loads and cotton or linen fabrics	
- PRE-LOADED CYCLES -	Bedding	Bulky items, pillows, blankets or comforters	
	Delicates	Lingerie, sheer or easily damaged fabrics	
	Heavy Duty	Extra drying for heavier fabrics	
	Small Load	Small or light items	
	Dry Time	Lets you manually select the drying time	
	Condenser Care	Additional condenser cleaning	

Or, quickly and easily customize your laundry with special cycles for a wide range of load types.

	WASH CYCLES	CYCLE DESCRIPTION		
DOWNLOADABLE CYCLES	Small Load	A small number of normally soiled items		
	Cold Wash	Washes with cold water for better energy efficiency		
	Rinse+Spin**	Rinses and spins items only		
	Sweat Stains	Helps remove sweat stains and odors		
	Single Garment	Quickly washes a single item		
	Minimize Residue	Adds a rinse for enhanced rinsing performance		
	Baby Wear	Powerful rinse helps remove stains from baby clothes		
	Spin Only	Drains and spins with no wash or rinse		
	Perm. Press	Minimizes wrinkles in "wrinkle-free" fabrics		
	Hand Wash/Wool	Shrinkable wool or hand-washable items		
NLOA	Sportswear	Special or treated fabrics for sports or outerwear		
DOW	Sanitary	▶ Washes clothes at a high temperature		
	Allergiene°	Reduces certain allergens using heat and steam		
	DRY CYCLES	CYCLE DESCRIPTION		
	Blanket	Dries bulky blankets		
	Blanket Refresh	▶ Warms and fluffs up blankets		
	Rainy Days	Dries damp clothes		
	Single Garment	Quickly dries a single item		

DRY CYCLES		CYCLE DESCRIPTION	
TES	Deodorization	Helps reduce odors in clothes that don't need washing	
	Lingerie	Specifically designed to dry lingerie	
	Easy Ironing	Leaves clothes slightly damp for easy ironing	
	Super Dry	Thoroughly dries cotton clothes	
	Economic Dry	Uses low temperatures to dry clothes and save energy	
	Big Size Item	Designed to dry bulky items	
	Minimize Wrinkles	Helps prevent wrinkles after drying	
E CY(Shoes/Fabric Doll	Refreshes shoes or stuffed toys (install the rack)	
DOWNLOADABLE CYCLES	Full Size Load	Dries large amounts of clothes	
	Perm. Press**	Minimizes wrinkles in "wrinkle-free" fabrics	
	Wool	Shrinkable wool or hand-washable items	
	Sportswear	Special or treated fabrics for sports or outerwear	
	Towels	Designed for towels	
	Power Dry	A high-temperature dry cycle	
	Rack Dry	Dries items that should not be tumbled (install the rack)	
	Air Dry	Tumble dries heat-sensitive items	
	Drum Care	Use regularly to prevent odors	

^{*}Optimizes cycle based on fabrics using AI.

^{**}Indicates default downloaded cycle.

Only LG WashTower[™] has the convenient Center Control[®] panel that's perfectly positioned with both washer and dryer controls at just the right height.

INTUITIVE, EASY-REACH CONTROLS

Built-in intelligence makes laundry less of a chore by taking out the guesswork.



1

POWER IT ON

Touch Power to turn on the washer or dryer—both can run at the same time but need to be set separately.

2

SELECT YOUR CYCLE

Choose from the pre-loaded wash and dry cycles or touch Downloaded to edit or add cycles via the ThinQ® app.

3

PRESS START

Touch and hold Start to begin the selected cycle. After sensing the load, the display will show remaining cycle time.

COMPLETELY CUSTOMIZE YOUR CYCLE

Modify any cycle by using the touch panel to change settings like temperature, spin speed or dry level to your liking. You can also add available options or select extra functions.

MODIFY ANY CYCLE

Press pads such as Temp., Spin or Dry Level to make adjustments to the selected cycle before you hit Start.

ADD OTHER OPTIONS

Available options for each cycle such as Extra Rinse or Wrinkle Care will light up on the touch panel—simply press to add.

Energy Saver	Very Normal	70 • •	More Time	Less Time
Normal Dry Mode	Damp Dry Level	30 Dry Time	Wrinkle Care	Condenser Care
*Wi-Fi	*Remote	*Control Lock	*Drum Light	
Hot •	High ●	Heavy	ි Steam	TurboWash
•	•	Normal	*Tub Clean	
•	•		- Tub Clean	
● Cold	● No Spin	Light	——————————————————————————————————————	
Cold Temp.	• No Spin Spin	Light Soil	Extra Rinse	Pre-wash