


LG WASHTOWER™ CYCLE & FABRIC CARE GUIDE

Built-in sensors use AI technology to select the right wash/dry motions, temperatures and more for advanced fabric care. Or, choose from a wide range of custom wash and dry cycles.

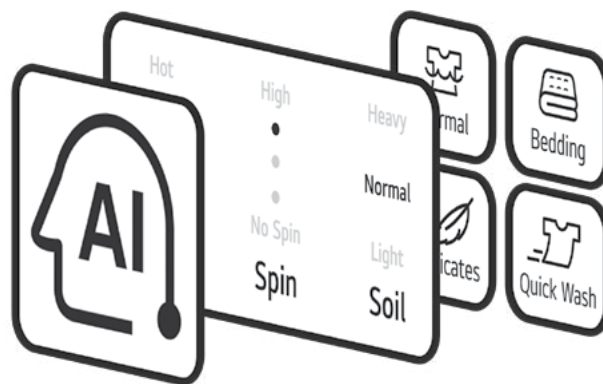

Get a fast start by choosing one of the pre-loaded wash and dry cycles.

| WASH CYCLES | CYCLE DESCRIPTION |
|-------------------|---|
| Normal* | Mixed loads and cotton or linen fabrics |
| Bedding | Bulky items, pillows, blankets or comforters |
| Delicates | Lingerie, sheer or easily damaged fabrics |
| Heavy Duty | Heavily soiled laundry, especially cotton fabrics |
| Quick Wash | Lightly soiled clothing or small loads |
| Tub Clean | Designed to clean the inside of the washer |

PRE-LOADED CYCLES

| DRY CYCLES | CYCLE DESCRIPTION |
|-----------------------|--|
| Normal | Mixed loads and cotton or linen fabrics |
| Bedding | Bulky items, pillows, blankets or comforters |
| Delicates | Lingerie, sheer or easily damaged fabrics |
| Heavy Duty | Extra drying for heavier fabrics |
| Small Load | Small or light items |
| Dry Time | Lets you manually select the drying time |
| Condenser Care | Additional condenser cleaning |

PRE-LOADED CYCLES

Or, quickly and easily customize your laundry with special cycles for a wide range of load types.

| WASH CYCLES | CYCLE DESCRIPTION |
|--------------------------|--|
| Small Load | A small number of normally soiled items |
| Color Care | Helps keep colors from fading |
| Beachwear | Gently removes salt from swimwear |
| Denim | Designed specifically for jeans |
| Sportswear | Special or treated fabrics for sports or outerwear |
| Blanket | Daily-use blankets (not intended for wool) |
| Sweat Stains | Helps remove sweat stains and odors |
| Rinse+Spin** | Rinses and spins items only |
| Juice/Food Stains | Powerful wash for heavily soiled items |
| Overnight Wash | Reduces washing noise, helps prevent wrinkles at night |
| Delicate Dresses | Lightly soiled, delicate dresses |
| Half Load Wash | Washer is approximately half full |
| Full Load Wash | Washer is very full |
| Hand Wash/Wool | Shrinkable wool or hand-washable items |
| Bright Whites™ | Use with white fabrics only |
| Perm. Press | Minimizes wrinkles in "wrinkle-free" fabrics |
| Towels | Includes high-speed spin to remove excess water |
| Spin Only | Drains and spins with no wash or rinse |

DOWNLOADABLE CYCLES

| DRY CYCLES | CYCLE DESCRIPTION |
|----------------------------|---|
| Rainy Days | Dries damp clothes |
| Easy Ironing | Leaves clothes slightly damp for easy ironing |
| Wrinkle Prevention | Prevents wrinkles by tumbling clothes after the cycle |
| Outerwear Refresh | Restores water-repellent treatment on outerwear |
| Towels | Designed for towels |
| Perm. Press** | Minimizes wrinkles in "wrinkle-free" fabrics |
| Active Wear | Special or treated fabrics for sports or outerwear |
| Air Dry | Tumble dries heat-sensitive items |
| Down Jacket Refresh | Helps restore loft to down jackets |
| Rack Dry | Dries items that should not be tumbled (install the rack) |
| Baby Wear | High-temperature or hygienic dry for baby clothes |
| Power Dry | A high-temperature dry cycle |
| Shrinkage Relief | Optimizes cycle settings to reduce shrinkage |
| Silent Dry | Reduces sounds made during drying |
| Drum Care | Use regularly to prevent odors |
| Bedding Refresh | Warms and fluffs up blankets |
| AI Dry | Optimizes cycle based on fabrics |

DOWNLOADABLE CYCLES


*Optimizes cycle based on fabrics using AI.

**Indicates default downloaded cycle.

Only LG WashTower™ has the convenient Center Control® panel that's perfectly positioned with both washer and dryer controls at just the right height.

INTUITIVE, EASY-REACH CONTROLS

Built-in intelligence makes laundry less of a chore by taking out the guesswork.

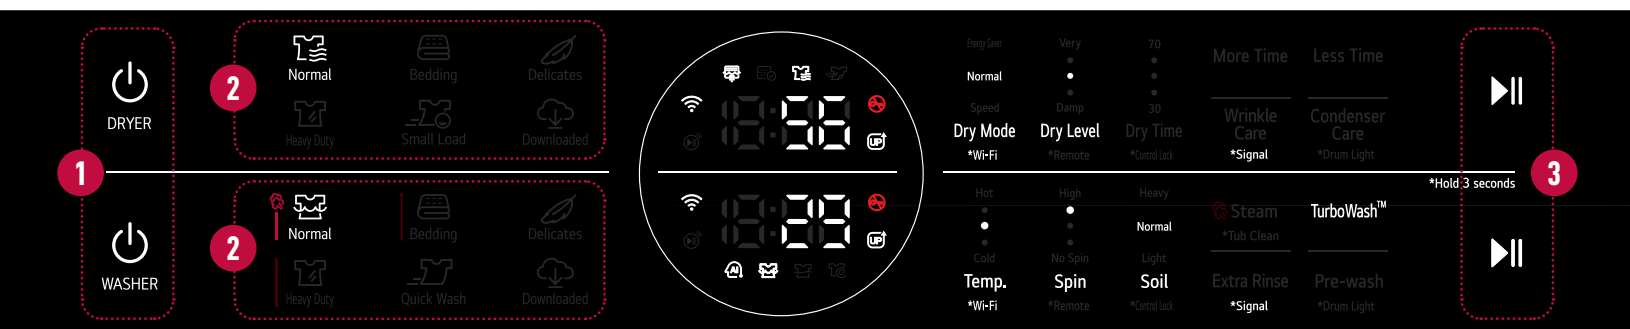

1

POWER IT ON

Touch Power to turn on the washer or dryer—both can run at the same time but need to be set separately.

2

SELECT YOUR CYCLE

Choose from the pre-loaded wash and dry cycles or touch Downloaded to edit or add cycles via the ThinQ® app.

3

PRESS START

Touch and hold Start to begin the selected cycle. After sensing the load, the display will show remaining cycle time.

COMPLETELY CUSTOMIZE YOUR CYCLE

Modify any cycle by using the touch panel to change settings like temperature, spin speed or dry level to your liking. You can also add available options or select extra functions.

MODIFY ANY CYCLE

Press pads such as Temp., Spin or Dry Level to make adjustments to the selected cycle before you hit Start.

ADD OTHER OPTIONS

Available options for each cycle such as Extra Rinse or Wrinkle Care will light up on the touch panel—simply press to add.

| | | | | |
|--------------|---------|---------------|--------------|----------------|
| Energy Saver | Very | 70 | More Time | Less Time |
| Normal | • | • | | |
| Speed | • | • | | |
| Dry Mode | Damp | 30 | Wrinkle Care | Condenser Care |
| *Wi-Fi | *Remote | *Control Lock | *Signal | *Drum Light |
| Hot | High | Heavy | Steam | TurboWash™ |
| • | • | Normal | *Tub Clean | |
| • | • | Light | | |
| Cold | No Spin | Soil | Extra Rinse | Pre-wash |
| Temp. | Spin | | *Signal | *Drum Light |
| *Wi-Fi | *Remote | *Control Lock | | |