

MONOGRAM 24" FULLY INTEGRATED DISHWASHER

ZDT800SSYSS



HANDLES SOLD SEPARATELY



 
Statement Handle ZXADH1STYSS (*shown*)



Minimalist Handle ZXADH1MNYSS



Designer Collection Handle in Titanium ZXADTH1PVT1



Designer Collection Handle in Brass ZXADTH1PVB1



40 DBA QUIET OPERATION

Harmonizing power and serenity, engineered to deliver flawless cleaning at a quiet 40 dBA in Normal cycle

FULL THIRD RACK

The expansive third rack provides the perfect space to clean utensils and flatware

ADVANCED WASH SYSTEM

Over 70 powerful wash jets, including dedicated flatware and bottle jets, plus a hard food disposer deliver a 360° clean to every corner of the dishwasher

DUAL DRY SYSTEM

A precise drying system, featuring dual fans and heaters, gently and efficiently dries even the most challenging items, including champagne flutes

TAILORED WASH CYCLES

Designed for hosting and everyday use, featuring a dedicated Crystal cycle along with specialty options such as PrepRinse™ and Dishwasher Cleaning for added care and convenience

BRILLIANT SURROUND LED LIGHTING

Illuminates the entire interior for effortless loading and unloading

INTUITIVE NAVIGATION

Glass touch controls and a brilliant LCD screen elevate the everyday chore into an effortless ritual

WIFI CONNECTED WITH SMARTHQ™

Protect and enhance your appliance with remote access, ongoing updates and alerts

HANDLES SOLD SEPERATELY

Elevate your dishwasher's look by selecting a Statement (ZXADH1STYSS) or Minimalist (ZXADH1MNYSS) Collection handle or one of our Designer Collection handles in Brass (ZXADTH1PVB1) or Titanium (ZXADTH1PVT1), SOLD SEPARATELY



SPECIFICATIONS

Cutout Height	34 1/2" (87.6 cm) Min; 35" (88.9 cm) Max
Minimum Cabinet Width	24" (61.0 cm)
Minimum Cabinet Depth	24" (61.0 cm)
Door Clearance	25 1/2" (with door open)
Electrical Requirements	1.2 A
Voltz/Hertz/Amps	120 V, 60 Hz, 15 or 20 amp circuit
Capacity	16 Place Settings
Unit Width	23 3/4"
Unit Height	33 3/4" - 34 5/8"
Unit Depth	24"

 
ATTENTION ELECTRICIAN:

A 115 volt 60Hz, 15 or 20 amp power supply is required. An individual properly grounded branch circuit or circuit breaker is recommended. Install a properly grounded 3-prong electrical receptacle recessed into the back wall.


Unit comes with power cord attached.

NOTE: Always refer to installation guide for complete installation instructions

INSTALLATION CUTOUT FRONT VIEW

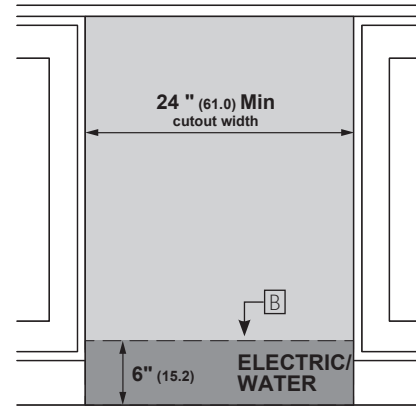

FLUSH INSTALLATION CUTOUT SIDE VIEW

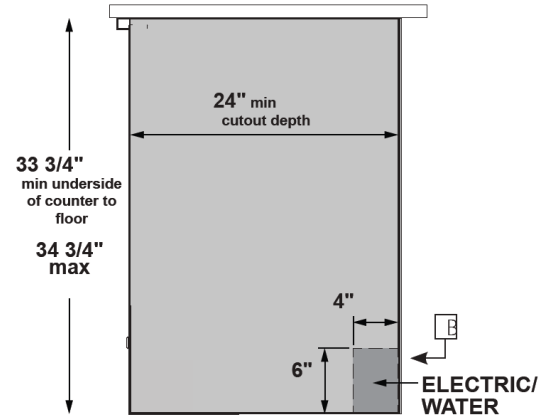 

- A** The dishwasher drain hose must be no more than 12 feet in length for proper drainage.
- B** Electrical connections are at the right front of the dishwasher and water connections are on the left. The hot water line should extend forward 30" to 40" from the rear wall. The electrical must extend forward at least 24" to reach the junction box.
- C** To prevent siphoning, an air gap or high drain loop must be used.

For more details, refer to the installation instructions for this product on Monogram.com. Dimensions in parentheses are in centimeters unless otherwise noted.