



LITTLE GREEN® MINI CORDLESS

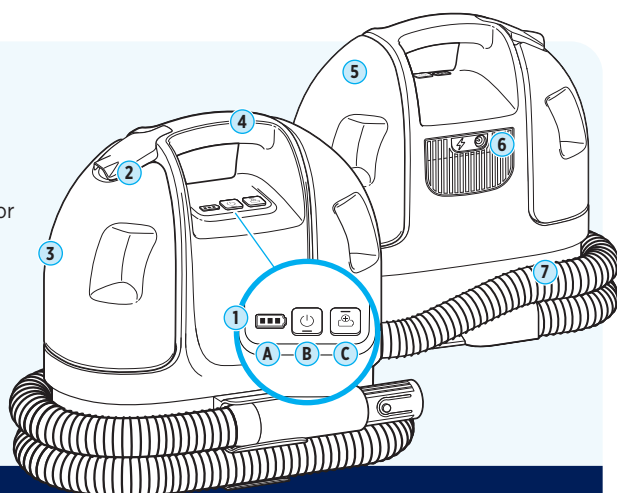
PORTABLE CARPET & UPHOLSTERY CLEANER

MODELS 4014, 4015, 4154

Tools Included.....	3	Using the HydroRinse™ Tool.....	6
Assembly and Charging.....	3	Troubleshooting.....	7
Filling the Clean Water Tank.....	4	Cleaning and Storing Your Machine.....	8
Using Your Machine.....	5	Warranty.....	8
Emptying the Dirty Water Tank.....	6		

Product Overview

- Control Panel
 - Battery Status Indicator
 - Power Button
 - BatteryBoost+ Mode Selector
- Dirty Water Tank Latch
- Dirty Water Tank
(Float Switch inside)
- Carry Handle
- Clean Water Tank
- Charging Port
- Hose



Meet your new BISSELL® product!

Go to support.BISSELL.com for a walkthrough of your new purchase, including videos, tips, support, and more. Want to get started right away? This guide has all the information you need to set up your new product. Let's take a look...

IMPORTANT SAFETY INSTRUCTIONS



READ ALL INSTRUCTIONS BEFORE USING YOUR APPLIANCE.

When using an electrical appliance, basic precautions should be observed, including the following:



WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- Unplug charger from electrical socket when not in use, before cleaning, maintaining or servicing the appliance.
- Do not expose to rain. Store indoors.
- Use only cleaning products intended for use with this appliance to prevent internal component damage. See the Cleaning Formulas section of this guide.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Do not use for any purpose other than described in this user guide. Use only manufacturer's recommended attachments.
- Do not charge with damaged charger or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors or dropped into water, it should be repaired by a qualified technician.
- Do not pull or carry charger by cord, use cord as a handle, close door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep "enter applicable name" cord away from heated surfaces.
- Do not unplug charger by pulling on cord. To unplug, grasp the charger, not the cord.
- Do not handle charger, including charger plug and charger terminals with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep openings free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts of the appliance and its accessories.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible materials (lighter fluid, gasoline, kerosene, etc.) or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not apply liquid directly to any person or animal.
- Prevent unintentional starting. Ensure the switch is in the OFF-position before picking up or carrying the appliance. Carrying the appliance with your finger on the switch or energizing appliance that can turn the switch on invites accidents.
- Turn OFF all controls, including the Power Switch and disconnect charger from electrical outlet before making any adjustments, performing maintenance, troubleshooting, changing accessories or storing appliance. Such preventative safety measures reduce the risk of starting the appliance accidentally.
- Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery-pack may create a risk of fire when used with another battery pack.
- Use only with charger SLL, Model SSC-297100US.
- Battery pack, charging port on the appliance and charger output are not to be short circuited.
- Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
- Do not use appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- Do not expose battery pack or appliance to fire or excessive temperature. Exposure to fire or temperature above 130°C/265°F may cause explosion.
- Follow all charging instructions and do not charge the appliance outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.
- Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.
- Do not modify or attempt to repair the appliance except as indicated in the instructions for use or care.
- Keep the temperature range of between 4-40°C/40-104°F when charging battery, storing unit or during use.
- Do not charge the machine outdoors.
- Do not turn your appliance ON until you are familiar with all instructions and operating procedures.
- This appliance contains batteries that are non-replaceable.
- Do not incinerate the appliance even if it is severely damaged. The batteries can explode in a fire.
- The battery must be removed from the appliance before it is scrapped.
- Keep appliance on a level surface.
- Liquid must not be directed towards equipment containing electrical components.
- Do not use appliance in an enclosed space filled with vapors given off by oil-based paint, paint thinner, some moth-proofing substances, flammable dust, or other explosive or toxic vapors.
- Do not use to pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.)
- Do not pick up hard or sharp objects such as glass, nails, screws, coins, etc.
- Plastic film can be dangerous. To avoid danger of suffocation, keep away from children.

SAVE THESE INSTRUCTIONS

THIS MODEL IS FOR HOUSEHOLD USE ONLY. COMMERCIAL USE OF THIS UNIT voids THE MANUFACTURER'S WARRANTY.

IMPORTANT INFORMATION

- To reduce the risk of a leaking condition, do not store where freezing may occur. Damage to internal components may result.
- Plastic tanks are not dishwasher safe. Do not put tanks in dishwasher.



WARNING

This product contains Lithium-Ion rechargeable batteries. DO NOT mix Lithium-Ion batteries with general household waste. According to Federal and State regulations, removal and proper disposal of Lithium-Ion batteries is required. For specific battery disposal instructions please contact Call2Recycle at 877-723-1297 or visit www.call2recycle.org. For full instructions on battery removal for recycling visit support.BISSELL.com.



SUPPLIER'S DECLARATION OF CONFORMITY 47 CRF SECTION 2.1077 COMPLIANCE INFORMATION Charger adapter for BISSELL product. CONTACT: BISSELL Homecare Inc., 2345 Walker Ave. NW, Grand Rapids, MI 49544. This device complies with Part 15 of FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Caution: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment OFF and ON, the user is encouraged to try to correct the interference by one or more of the following measures: (1) Reorient or relocate the receiving antenna. (2) Increase the separation between the equipment and receiver. (3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. (4) Consult the dealer or an experienced radio/TV technician for help.

TOOLS INCLUDED IN BOX WILL DIFFER BY MODEL

To see what's included with your purchase, check the "Carton Contents" list on the top flap of the box.




Machine



Hose Clip



Charger








Tools
(vary by model)



Trial Formula


Assembly and Charging

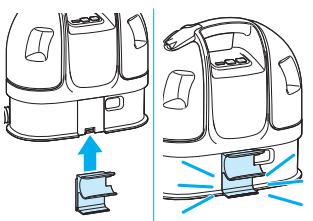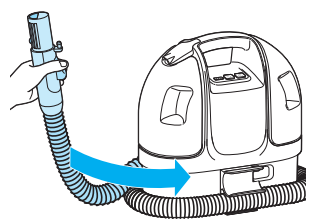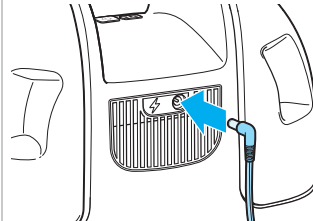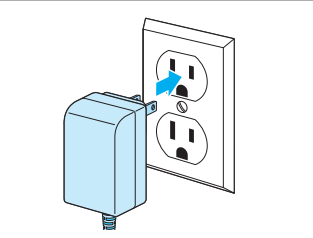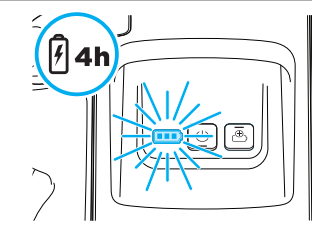Important: Plug in the machine immediately upon receiving. For maximum run time (up to 20 minutes in BatteryBoost+ mode), charge for 4 hours before use.

		
1. Slide hose clip into the opening on the front of the machine until it clicks into place.	2. Wrap hose around bottom of machine and place on hose clip.	3. Turn machine OFF. Charging port door slides out of the way when charger is inserted. Insert charger into port.
		
4. Plug charger into a wall outlet. Note: Machine will automatically turn OFF when it is plugged in to charge.	5. The battery status indicator lights will illuminate when charging. Machine CANNOT be turned ON until unplugged from charger.	

Filling the Clean Water Tank

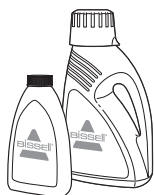
For optimal performance, use genuine BISSELL formulas in your machine. Other formulas or household cleaners may cause defects or damage to the machine.




1. Choose your formula.*



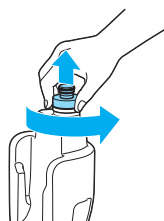
2. Lift clean water tank up to remove.



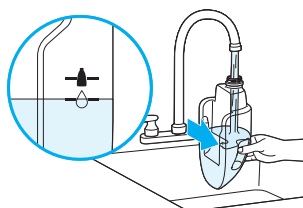
3. Unscrew cap.



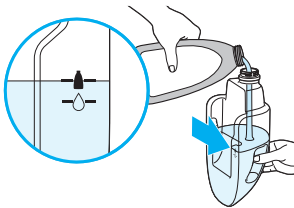4. Fill with warm (140°F/60°C MAX) tap water to water line. Do not use boiling water. Do not heat water in the microwave.



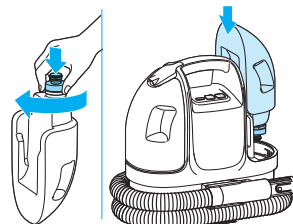5. Add formula to the formula fill line indicated on the side of the tank.



6. Tighten cap back into place. Align clean tank with groove on machine and slide down until it clicks.

***Compatible BISSELL formulas include:** Pet PRO Oxy Spot & Stain, PRO Oxy Spot & Stain, Little Green™ Formula

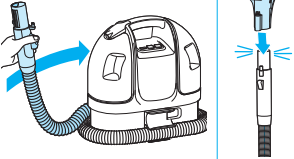
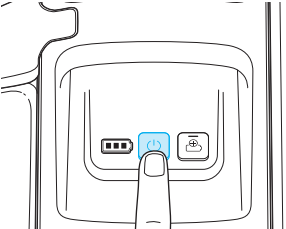
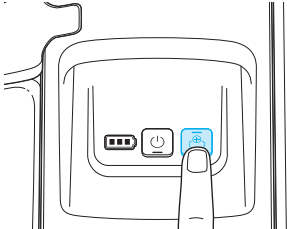
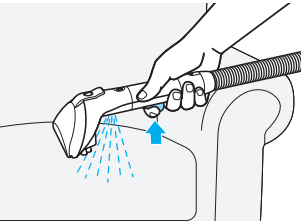
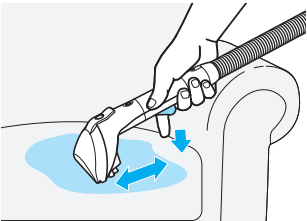
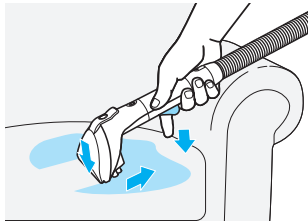
⚠ WARNING To reduce the risk of fire and electric shock due to internal component damage, use only BISSELL cleaning formula intended for use with this machine.

Using Your Machine

Before You Clean

- Ensure your machine is fully charged.
- Vacuum to remove loose dirt from areas to be cleaned.
- Spray any BISSELL stain pretreat formula on soiled areas and allow to sit for a few minutes.
- Tip: For upholstery, work in small sections until area is clean.

Attaching and Using the Tools

		
1. Unwrap hose. Attach your desired tool to end of hose grip until it clicks.	2. Press power button ON.	3. Select cleaning mode . See below for more information.
		
4. While holding tool above desired area, press and hold trigger to spray solution.	5. Release spray trigger and gently scrub stain using bristles.	6. With trigger released, press tool firmly against surface and pull towards you to remove stain. Repeat as needed.

Cleaning Modes



BatteryBoost+ Mode

ENERGY-EFFICIENT POWER

The light will be solid green when BatteryBoost+ mode is ready.

The motor idles until the tool contacts the surface, then ramps up to optimal suction. Run time up to 20 minutes.

Note: If the light flashes, wait until it stops to start cleaning.

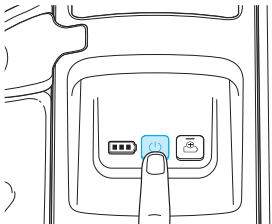
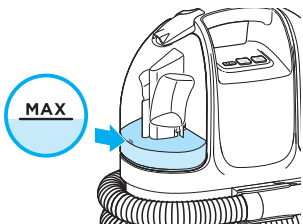
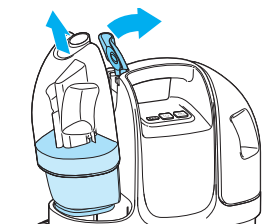
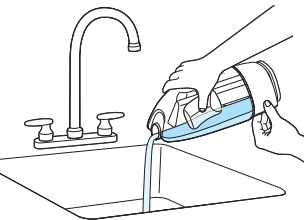
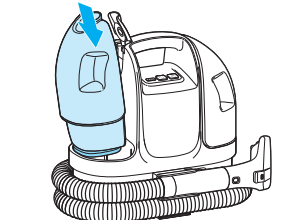
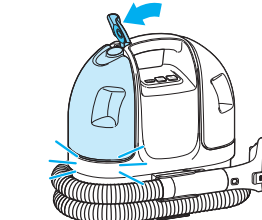


Standard Mode

HIGHEST SUCTION POWER


Motor remains with optimal suction power for a run time of up to 15 minutes.

Emptying the Dirty Water Tank

		
1. Turn machine OFF before emptying.	2. Empty dirty water tank when it reaches “MAX” line. Do not let water level fill above the MAX line.	3. To remove the dirty water tank, lift up tank release latch and remove the tank from the machine.
		
4. Pour out dirty water and rinse tank with warm water.	5. Lower tank back on to machine until it clicks into place and lower dirty water tank latch into place.	

Using the HydroRinse™ Tool


Use HydroRinse tool to clean out your hose after each use.

	
1. Attach tool to end of hose grip until it clicks.	2. Hold hose and tool in an upright position with machine ON. Hold down trigger for 30 seconds. Be sure to empty dirty water tank after use.


Troubleshooting

Problem	Possible Cause	Remedies
Reduced spray or no spray	Spray nozzle clogged.	Clean spray nozzle.
	Clean water tank empty.	Refill tank.
	Clean water tank insert clogged.	Clean insert at bottom of tank.
	Pump needs priming.	Reseat clean water tank and hold spray trigger to allow machine to prime.
	Clean water tank damage.	Order replacement clean water tank.
	Clean water tank valve stuck.	Use a small tool or utensil to free valve on clean water tank cap.
Machine won't pick up cleaning solution	Tank release latch is not closed properly.	Lift up the tank release latch and press down firmly to make sure it is in place.
	Poor tool position.	Reposition tool on surface. Ensure nozzle on tool is making contact with surface for optimal suction.
	Dirty water tank is full.	Empty tank.
	Tool is damaged.	Replace with new tool.
	Excess solution in flex hose.	Lift tool and point upwards to allow water in hose to flow into the dirty water tank.
	Incorrect cleaning formula.	Only use BISSELL® portable machine formulas(with BISSELL Boost if desired).
	Hose is damaged.	Contact BISSELL Consumer Care.
	Dirty water tank is damaged.	Order replacement dirty water tank.
Leaking	Dirty water tank is damaged.	Order replacement dirty water tank.
	Clean water tank is damaged.	Order replacement clean water tank.
	Dirty water tank is full.	Empty dirty water tank.
	Clean water tank cap is damaged or improperly installed.	Ensure clean water tank cap is not stuck or allowing water to flow freely. Ensure cap is securely tightened onto tank.
BatteryBoost+ light flashes during use and suction through the tool is inconsistent	Moving between different surfaces may require the machine to recalibrate.	Lift tool off of cleaning surface and wait for the machine to recalibrate. Once the light turns solid and the motor idles, you can resume cleaning.

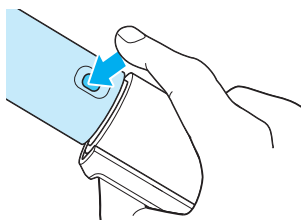
Cleaning and Storing Your Machine



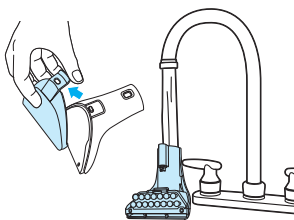1. To disconnect tools, push down on button above hose grip and pull straight off. Do NOT twist tool to remove it.



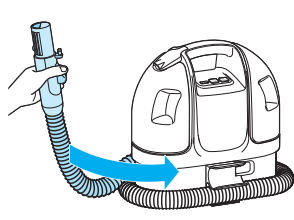2. Remove and rinse tools under clean, running water. Allow tools to dry.



3. Wrap hose for storage. Store indoors in a secure, dry location. If planning to store for over 6 months, ensure battery is fully charged before storage.

Note: Other maintenance or service not included in this manual should be performed by an authorized service representative.

NOTICE: To reduce the risk of a leaking condition, do not store where freezing may occur. Damage to internal components may result. Store machine in protected, dry area at room temperature (40°F - 104°F).

Warranty

Limited 2-year warranty, may vary by state. Visit support.BISSELL.com or call 1-800-237-7691 for complete warranty information.

Terms and Conditions

Your purchase is subject to the BISSELL® Terms and Conditions, which includes dispute resolution through arbitration and class waiver. For complete terms or to opt out from arbitration or class waiver, visit BISSELL.com/terms-of-use or call 1-800-237-7691.

Need more support?

Head to support.BISSELL.com to troubleshoot, register your product, order spare parts, view your warranty, and more.



INFO



REGISTER



VIDEOS



PARTS



SUPPORT

INFORMACIÓN REGISTRO VÍDEOS REPUESTOS ASISTENCIA



Vaya a **support.BISSELL.com** para consultar la solución de problemas, registrar su producto, pedir repuestos, ver la garantía y más.

¿Necesita más ayuda?

Términos y condiciones

Su compra está sujeta a los Términos y condiciones de BISSELL®, que incluyen la resolución de disputas a través del arbitraje y la renuncia de clase. Para consultar los términos completos o decidir no participar en el arbitraje o la renuncia de clase, visite [BISSELL.com/terms-of-use](https://support.BISSELL.com/terms-of-use) o llame al 1-800-237-7691.

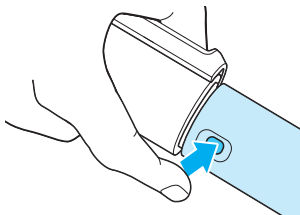
Garantía limitada de 2 años, puede variar según el país. Visite support.BISSELL.com o llame al 1-800-237-7691 para obtener toda la información sobre la garantía.

Garantía


AVISO: Para reducir el riesgo de fugas, no guarde el aparato donde pueda congelarse. Esto puede provocar daños en los componentes internos. Guarde el aparato en un lugar protegido y seco a temperatura ambiente (40 °F - 104 °F).

Nota: Cualquier otro tipo de mantenimiento o reparación no incluido en este manual debe realizarlo un representante de servicio autorizado.


1. Para separar las herramientas, pulse el botón situado sobre el agarre de la manguera y tire hasta retirarlas. NO gire las herramientas para retirarlas.



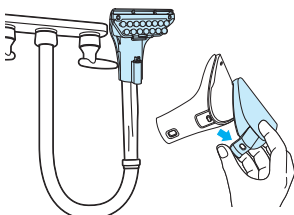2. Retire las herramientas y enjuéguelas con agua limpia del grifo. Deje que las herramientas se sequen.




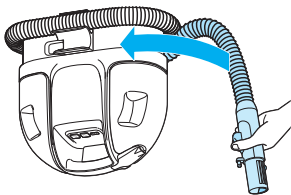
3. Enrolle la manguera para guardarla. Guarde el aparato en un lugar seguro y seco. Si tiene pensado guardarlo durante más de 6 meses, asegúrese antes de que la batería esté completamente cargada.



Limpieza y almacenamiento del aparato





Solución de problemas

Problema	Posible causa		Soluciones	
Poco o nada de spray	Boquilla del spray obstruida.	Limpe la boquilla del spray.	Vuelva a llenar el depósito.	Limpe el inserto en la parte inferior del depósito.
	Inserto del depósito de agua	limpia obstruido.	Vuelva a colocar el depósito de agua limpia y mantenga pulsado el gatillo del spray para cebar el aparato.	Pida un repuesto del depósito de agua limpia.
	Depósito de agua limpia dañado.			Utilice una herramienta o utensilio pequeño para liberar la válvula de la tapa del depósito de agua limpia.
	Válvula del depósito de agua	limpia atascada.	Levante el cierre del depósito y presione con firmeza para asegurarse de que esté en su lugar.	Vuelva a colocar la herramienta en la superficie. Para lograr una succión óptima, asegúrese de que la boquilla de la herramienta esté en contacto con la superficie.
	El cierre del depósito no está cerrado correctamente.		Sustituya la herramienta por otra nueva.	Exceso de solución en la manguera flexible.
	La herramienta está dañada.		Use únicamente las fórmulas para aparatos portátiles de BISSELL® (con BISSELL Boost si lo desea).	Fórmula de limpieza incorrecta.
	La manguera está dañada.		Póngase en contacto con BISSELL Consumer Care.	El depósito de agua sucia está dañado.
	El depósito de agua sucia está dañado.		Pida un repuesto del depósito de agua sucia.	El depósito de agua limpia está dañado.
	El depósito de agua sucia está dañado.		Pida un repuesto del depósito de agua sucia.	El depósito de agua limpia está dañado.
	El depósito de agua sucia está lleno.		Vacíe el depósito.	El depósito de agua sucia está lleno.
El aparato no recoge la solución de limpieza	La herramienta está dañada.		Sustituya la herramienta por otra nueva.	La herramienta está dañada.
	Exceso de solución en la manguera flexible.		Levante la herramienta y apunte hacia arriba para permitir que el agua en la manguera fluya hacia el depósito de agua sucia.	Use únicamente las fórmulas para aparatos portátiles de BISSELL® (con BISSELL Boost si lo desea).
	Fórmula de limpieza incorrecta.		Póngase en contacto con BISSELL Consumer Care.	El depósito de agua sucia está dañado.
	La manguera está dañada.		Pida un repuesto del depósito de agua sucia.	El depósito de agua sucia está dañado.
	El depósito de agua sucia está dañado.		Pida un repuesto del depósito de agua sucia.	El depósito de agua sucia está dañado.
	El depósito de agua sucia está dañado.		Pida un repuesto del depósito de agua sucia.	El depósito de agua sucia está dañado.
	El depósito de agua sucia está dañado.		Pida un repuesto del depósito de agua sucia.	El depósito de agua sucia está dañado.
	El depósito de agua sucia está dañado.		Pida un repuesto del depósito de agua sucia.	El depósito de agua sucia está dañado.
	El depósito de agua sucia está dañado.		Pida un repuesto del depósito de agua sucia.	El depósito de agua sucia está dañado.
	El depósito de agua sucia está dañado.		Pida un repuesto del depósito de agua sucia.	El depósito de agua sucia está dañado.
Fuga	La tapa del depósito de agua	limpia está dañada o instalada incorrectamente.	Asegúrese de que la tapa del depósito de agua limpia no esté atascada ni que permita que el agua fluya libremente. Asegúrese de que la tapa esté bien apretada en el depósito.	Retire la herramienta de la superficie de limpieza y espere a que el aparato vuelva a calibrarse. Podrá reanudar la limpieza cuando la luz quede fija y el motor funcione al ralentí.
	Al pasar de una superficie a otra, puede que el aparato deba recalibrarse.			
	La luz de BatteryBoost+ parpadea durante el uso y la herramienta no succiona constantemente			

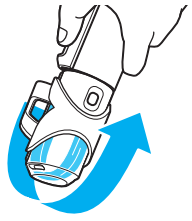1. Adjunte la herramienta al extremo del agarre de la manguera hasta que haga clic.	2. Mantenga la manguera y la herramienta en posición vertical con el aparato encendido. Mantenga presionado el gatillo durante 30 segundos. Asegúrese de vaciar el depósito de agua sucia después de cada uso.
	

Utilice la herramienta HydroRinse para limpiar la manguera después de cada uso.

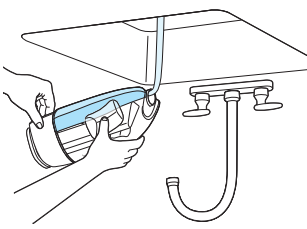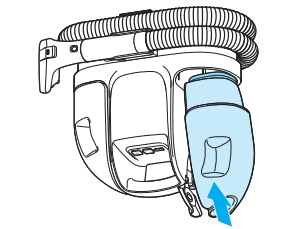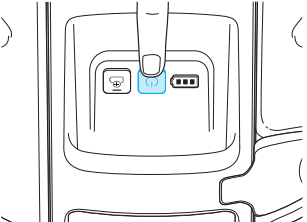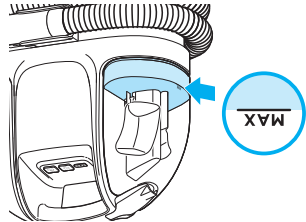Cómo usar la herramienta HydroRinse™

4. Exprese el agua sucia y enjuague el depósito con agua tibia.	5. Vuelva a colocar el depósito en el aparato. Póngalo en su sitio hasta que haga clic y coloque también el cierre del depósito de agua sucia.
	
1. Apague el aparato antes de vaciar el depósito.	2. Vacíe el depósito de agua sucia cuando el nivel de agua alcance la línea «MAX». No deje que el nivel de agua supere la línea «MAX».
	

Cómo vaciar el depósito de agua sucia

Cómo usar el aparato

Antes de limpiar

- Asegúrese de que el aparato esté completamente cargado.
- Aspire para eliminar la suciedad suelta de las áreas que desea limpiar.
- Rocíe cualquier fórmula de tratamiento previo de manchas de BISSELL en las áreas sucias y deje actuar durante unos minutos.
- Consejo: En el caso de la tapicería, trabaje en pequeñas secciones hasta que el área esté limpia.

Cómo adjuntar y usar las herramientas

	1. Desenrolle la manguera. Adjunte la herramienta que desee al extremo del agarre de la manguera hasta que haga clic.
	2. Pulse el botón de encendido.
	3. Seleccione la modalidad de limpieza. Consulte a continuación para obtener más información.

	4. Mientras sostiene la herramienta sobre el área deseada, mantenga presionado el gatillo para rociar la solución.
	5. Suelte el gatillo del spray y frote suavemente la mancha con las cerdas.
	6. Con el gatillo liberado, presione la herramienta firmemente contra la superficie y tire hacia usted para eliminar la mancha. Repita los pasos anteriores según sea necesario.

Modalidades de limpieza



Modality BatteryBoost+

POTENCIA DE BAJO CONSUMO

La luz será fija y de color verde cuando la modalidad BatteryBoost+ esté lista. El motor estará al ralentí hasta que la herramienta contacte con la superficie, y luego aumenta las revoluciones hasta lograr una succión óptima. Tiempo de funcionamiento de hasta 20 minutos.

Nota: Si la luz parpadea, espere hasta que se detenga para comenzar a limpiar.

Modality estándar

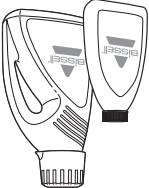
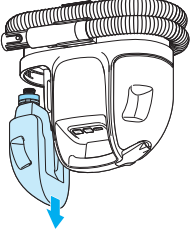
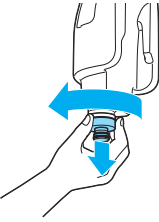
MÁXIMA POTENCIA DE SUCCIÓN






El motor mantiene una potencia de succión óptima durante un tiempo de funcionamiento máximo de 15 minutos.

Cómo llenar el depósito de agua limpia

Para un rendimiento óptimo, use el aparato con fórmulas de BISSELL. Otras fórmulas o productos de limpieza para el hogar pueden causar defectos o daños en el aparato.

		
1. Elija su fórmula.*	2. Levante el depósito de agua limpia para retirarlo.	3. Desenrosque la tapa.

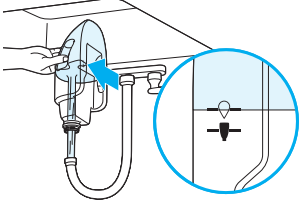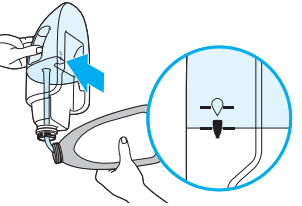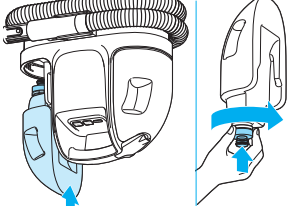		
4. Llene el depósito con agua del grifo tibia (temperatura MÁXIMA de 60 °C/140 °F) hasta la línea de agua. No use agua hirviendo. No caliente el agua en el microondas.	5. Añada la fórmula hasta alcanzar la línea de llenado de fórmula indicada en el lateral del depósito.	6. Vuelva a colocar la tapa en su lugar. Alinee el depósito limpio con la ranura del aparato y deslice hacia abajo hasta que haga clic.

*Las fórmulas BISSELL compatibles incluyen: Mascota PRO Oxy Spot & Stain, PRO Oxy Spot & Stain, Little Green™ Formula



ADVERTENCIA

Para reducir el riesgo de incendio y descarga eléctrica debido a daños en los componentes internos, utilice únicamente la fórmula de limpieza BISSELL destinada para su uso con este aparato.

DECLARACIÓN DE CONFORMIDAD DEL PROVEEDOR 47 CF SECCIÓN 2.1077 INFORMACIÓN DE CONFORMIDAD Adaptador del cargador para producto BISSELL. CONTACTO: BISSELL Homecare Inc., 2345 Walker Ave. NW, Grand Rapids, MI 49544. Este dispositivo cumple con el apartado 15 de las Normas de la FCC. El funcionamiento está sujeto a las siguientes dos condiciones: (1) este dispositivo no puede causar interferencias perjudiciales y (2) este dispositivo debe aceptar las interferencias recibidas, incluyendo las que puedan causar un funcionamiento no deseado. Atención: Los cambios o modificaciones de esta unidad que no estén expresamente aprobados por la parte responsable del cumplimiento podrían anular la facultad del usuario para utilizar el equipo. NOTA: Este equipo ha sido probado y cumple los límites establecidos para los dispositivos digitales de Clase B, de conformidad con el apartado 15 de las Normas de la FCC. Estos límites están diseñados para proporcionar una protección razonable contra interferencias dañinas en una instalación doméstica. Este equipo genera, utiliza y puede irradiar energía de radiofrecuencia y, si no se instala y utiliza de acuerdo con las instrucciones, puede causar interferencias perjudiciales en las comunicaciones de radio. Sin embargo, no hay garantía de que no se produzcan interferencias en una instalación en concreto. Si este equipo causa interferencias perjudiciales en la recepción de radio o televisión, lo que se puede determinar apagando y encendiendo el equipo, se recomienda al usuario que intente corregir la interferencia mediante una o más de las siguientes medidas: (1) Reorientar o reubique la antena receptora. (2) Aumente la distancia entre el equipo y el receptor. (3) Conecte el equipo a una toma de corriente de un circuito distinto al que esté conectado el receptor. (4) Consulte al distribuidor o a un técnico de radio/TV experimentado para obtener ayuda.

LAS HERRAMIENTAS INCLUIDAS EN LA CAJA

Para ver qué está incluido en su compra, consulte la lista «Contenido de la caja» en la solapa superior de la caja.

Aparato	Abrazadera de manguera	Cargador	Herramientas (varían según el modelo)	Fórmula de prueba

1. Deslice la abrazadera de manguera en la abertura de la parte frontal del aparato hasta que oiga un clic y encaje en su sitio.

2. Enrolle la manguera alrededor de la parte inferior del aparato y coloque el clip de la manguera.

3. Apague el aparato. La puerta del puerto de carga se desliza hacia un lado cuando se introduce el cargador. Introduzca el cargador en el puerto.

Importante: Enchufe el aparato inmediatamente después de recibirlo. Para obtener el máximo tiempo de funcionamiento (20 minutos en la modalidad BatteryBoost+), cargue la batería durante 4 horas antes de usar el aparato.

4. Conecte el cargador a un enchufe de pared. Nota: El aparato se apagará automáticamente cuando esté conectado para cargarlo.

5. Las luces del indicador de estado de la batería se iluminarán durante la carga. El aparato NO se puede encender hasta que se desconecte del cargador.



LITTLE GREEN® MINI IN ALAMBICO


LIMPIADOR PORTÁTIL DE MOQUETAS Y TAPICERÍAS

MODELOS 4014, 4015, 4154

Herramientas incluidas.....	3
Cómo usar la herramienta HydroRinse™ ...	6
Solución de problemas.....	7
Limpieza y almacenamiento del aparato...8	
Cómo usar el aparato.....	5
Cómo vaciar el depósito de agua sucia6	

Descripción del producto

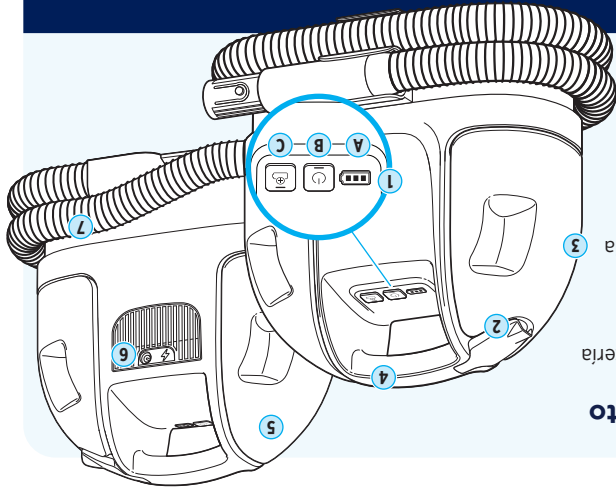1. Panel de control
- A. Indicador de estado de la batería
- B. Botón de encendido
- C. Selector de modalidad BatteryBoost+
2. Cierre del depósito de agua sucia
3. Depósito de agua sucia (pila de flotación dentro)
4. Asa de transporte
5. Depósito de agua limpia
6. Puerto de carga
7. Manguera



¡Conozca su nuevo producto BISSELL!

Vaya a support.bissell.com para consultar información sobre su nueva compra, incluyendo videos, consejos, asistencia y más. ¿Quiere empezar ahora mismo? Esta guía tiene toda la información que necesita para configurar su nuevo producto. Vamos a echar un vistazo...

