Bespoke Smart Slide-In Electric Range 6.3 cu. ft. with Precision Knobs





Features

- Precision Knobs
- Glass-Touch Controls
- Self & Steam Clean
- Storage Drawer

Convenience

- Wi-Fi Connectivity
- Voice-Enabled
- Self & Steam Clean
- Hidden Bake Element
- Child Safety Lock
- Delay Start
- Auto Oven Light
- Kitchen Timer
- Sabbath Mode

Specifications

Electric Ceramic Cooktop

- Right Front: 6"/9" 3,000W
- Left Front: 6"/9" 3,000W
- Right Rear: 6" 1,200W
- Left Rear: 6" 1,200W
- Center: 6" Warming Zone (100W)

Oven

• Capacity: 6.3 cu. ft.

- Bake
- Variable Broil: Low/High
- Keep Warm
- Bread Proof

Available Colors





Dimensions

Oven Interior Dimensions (WxHxD)

Dimensions: $24^{13}/_{16}$ " x $22^{7}/_{16}$ " x $19^{3}/_{4}$ "

Product Dimensions (WxHxD)

Dimensions: $29^{15}/_{16}$ " x 36" $-36^{3}/_{4}$ " (Adj.) x $27^{7}/_{8}$ "

Weight: 157.2 lbs

Shipping Dimensions & Weight (WxHxD)

Dimensions: $33^{1}/_{16}$ " x $41^{1}/_{8}$ " x $30^{5}/_{16}$ "

Weight: 176.8 lbs

Warranty

One (1) Year Parts and Labor

UPC


Finish	Model #	UPC Code
Stainless Steel	NSE6DG8100SR	887276817279
Matte Black Steel	NSE6DG8100MT	887276817262




NSE6DG8100 SAMSUNG

Bespoke Smart Slide-In Electric Range 6.3 cu. ft. with Precision Knobs

Installation Specifications

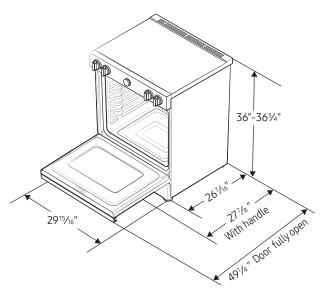

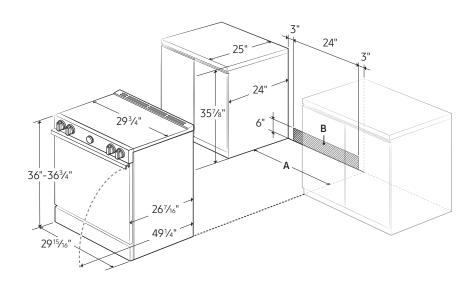


Electrical Requirements

240V/208V/60 Hz 40 Amps

A: Cabinet opening min 30"

B: Acceptable electrical outlet area

IMPORTANT: If your cabinets are over 363/4" high, you must install this range on a hard, heat resistant support that raises the surface of the range so that it is about even with the countertop.

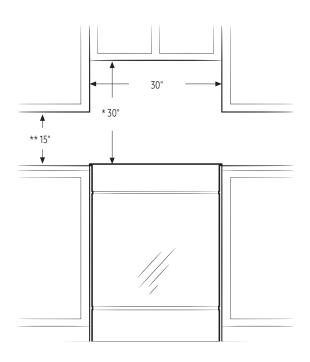

- * 30" minimum clearance between the top of the cooking surface and the bottom of an unprotected wood or metal cabinet; or 24" minimum when the bottom of the wood or metal cabinet is protected by not less than ¼" of flame retardant millboard covered with not less than no.28 MSG sheet steel, 0.015" stainless steel, 0.024" aluminum, or 0.020" copper.
- **15" minimum between the countertop and the adjacent cabinet bottom.

IMPORTANT: Consult with Installation Manual for detailed instructions before installing. All ranges must be installed with the Anti-Tip device that is included.

