



Installation Guide

Quality, Design and Innovation



home.liebherr.com/fridge-manuals



LIEBHERR

General safety instructions

Contents

1	General safety instructions.....	2
2	Installation conditions.....	3
2.1	Installation location.....	3
2.2	Position in the space.....	3
2.3	Installing under a countertop.....	4
3	Appliance dimensions.....	4
4	Recess dimensions.....	4
5	Cabinet front.....	5
5.1	Weight of cabinet front.....	5
5.2	Cabinet door.....	5
5.3	Cabinet front dimension.....	5
5.4	Decorative panel dimensions.....	6
6	Transporting the appliance.....	6
6.1	Transporting the appliance for initial installation.....	6
6.2	Transporting the appliance after initial installation.....	6
7	Unpacking the appliance.....	6
8	Disposal of packaging.....	6
9	Changing the door hinge.....	7
9.1	Safety instructions.....	7
9.2	Tool.....	7
9.3	Removing the covers.....	7
9.4	Removing the door.....	8
9.5	Pulling off the hinges.....	8
9.6	Moving the mounting bracket.....	8
9.7	Attaching the hinges.....	9
9.8	Moving the top bracket.....	9
9.9	Moving the bottom bracket.....	10
9.10	Moving the bottom bracket.....	10
9.11	Installing the door.....	11
9.12	Putting on the covers.....	11
10	Recessed installation.....	12
10.1	Tool.....	12
10.2	Preparing the appliance.....	12
10.3	Fastening the appliance to the ceiling.....	13
10.4	Fastening the appliance laterally.....	13
10.5	Leveling out the appliance.....	13
10.6	Installing the base.....	14
10.7	Fastening the appliance in the recess.....	14
11	Installing the unit door.....	14
12	Connecting the appliance to the power supply.....	16

The manufacturer is constantly working to improve all types and models. Therefore, please be aware that we reserve the right to make changes to the shape, equipment and technology.

Symbol	Explanation
	Read instructions Please read the information in these instructions carefully to understand all of the benefits of your new appliance.
	Additional information online The digital manual with supplemental information can be found online by scanning the QR code on the front page of this manual or by entering the service number at home.liebherr.com/fridge-manuals .
	Check appliance Check all parts for transport damage. If you have any complaints, please contact your agent or customer service.
	Differences These instructions apply to a range of models, so there may be differences. Sections that apply to certain models only are indicated by an asterisk (*).
	Instructions and results Instructions are marked with a ▶. Results are marked with a ▷.
	Videos Videos about the appliances are available on the YouTube channel of Liebherr-Haushälteräte.


Open-source licenses:

The appliance includes software components that make use of open-source licenses. You can find information on the open-source licenses to be used here: home.liebherr.com/open-source-licenses

1 General safety instructions

- Please keep this assembly manual in a safe place so you can refer back to it at any time.
- If you pass the appliance on, please hand this assembly manual to the new owner.
- Read this assembly manual before installation and use in order to use the appliance safely and correctly. Follow the instructions, safety instructions and warning messages included at all times. They are important for ensuring you can operate and install the appliance safely and without any problems.
- First read the general safety instructions in the “General safety instructions” section of the **operating instructions**, which accompany these installation instructions, and follow them. If you cannot find the **operating instructions**, you can download the **operating instructions** from the internet by entering the service number at home.liebherr.com/fridge-

manuals. The service number can be found on the

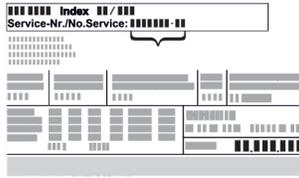

serial tag:

- **Observe the warning messages and other detailed information in the other sections when installing the appliance:**

	DANGER	indicates a hazardous situation, which if not avoided, will result in death or serious injury.
	WARNING	indicates a hazardous situation, which if not avoided, could result in death or serious injury.
	CAUTION	indicates a hazardous situation, which if not avoided, will result in minor or moderate injury.
	NOTICE	indicates a hazardous situation, which if not avoided, could result in damage to property.
	Note	indicates useful advice and tips.

2 Installation conditions

The installation conditions are crucial to ensure that you can operate your appliance safely, efficiently, and trouble-free.

- Observe all safety instructions.
- Observe the installation location and position in the room.

WARNING

Danger of fire due to incorrect positioning!
If the power supply cable or plug touches the back of the appliance, the vibration can damage the power supply cable or the plug resulting in a short circuit.

- ▶ Make sure the power supply cable is not trapped under the appliance when you position the appliance.
- ▶ Install the appliance so that it does not touch any plugs or power cables.
- ▶ Do not connect any appliances to sockets in the area of the back of the appliance.
- ▶ Do **not** place and operate power strips/power distributors and other electronic devices (such as halogen transformers) at the back of the appliances.

WARNING

Risk of fire due to moisture!
If live parts or the power cord get wet, this can cause a short circuit.

- ▶ The appliance is designed for use in enclosed spaces. Do not operate the appliance in open space or in damp areas or where there is spray.

WARNING

Leaking refrigerant and oil!
Fire. The refrigerant contained within the appliance is environmentally friendly, but flammable. The oil contained within the appliance is flammable. Escaping refrigerant and oil can ignite if they are of high enough concentration and are exposed to an external heat source.

- ▶ Do not damage the pipelines of the coolant circuit and the compressor.

2.1 Installation location

- Only set up and used the appliance in enclosed spaces.
- Only operate the appliance in installed condition.
- If the appliance is set up in a very humid environment, condensation may form on the outside of it. Always ensure good ventilation at the installation location.
- The more refrigerant there is in the appliance, the larger the room in which the appliance is installed must be. If the room is too small, a flammable gas/air mixture may form in the event of a leak. Per 8 g (0.28 oz) refrigerant, the installation space must be at least 1 m³ (35.5 ft³) in size. Information on the refrigerant contained can be found on the type plate inside the appliance.
- The floor at the installation location must be horizontal and level.

2.2 Position in the space

- Do not install the appliance in an area with direct sunlight, next to a heating unit or similar.
- You can install the appliance directly next to an oven.
- If you install the appliance directly next to an oven, its energy consumption may increase slightly. This depends on the service life and how often the oven is used.
- If the appliance is installed in a cooking island, appliances with an integrated exhaust air system can damage the appliance. Make sure you either have a separate air duct or otherwise install a partition wall between the appliances.
- Use in potentially explosive atmospheres is not permitted.

Appliance dimensions

2.3 Installing under a countertop

- If you install the appliance in a kitchen unit that stands on an uneven floor: Level the kitchen cabinets.

3 Appliance dimensions

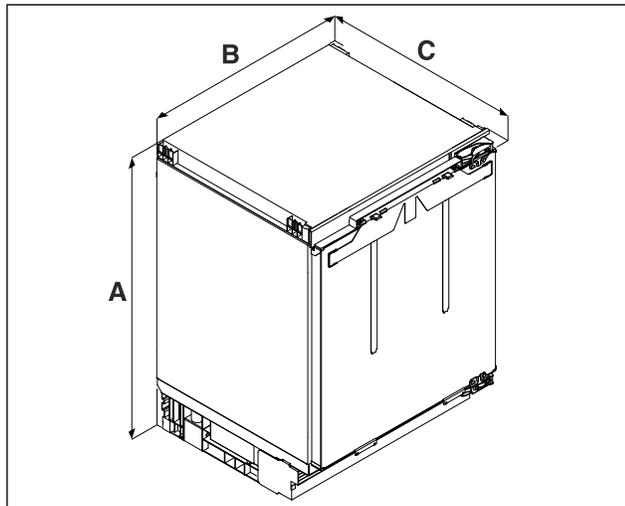


Fig. 1 Example illustration

- (A) Appliance height including feet
- (B) Appliance width
- (C) Appliance depth

	U.. 36.. ^{A)}	U.. 37.. ^{A)}
A	819 mm (32 1/4 in)	859 mm (33 7/8 in)
B	597 mm (23 1/2 in)	
C	556 mm (21 15/16 in)	

A) Appliance type designation

4 Recess dimensions

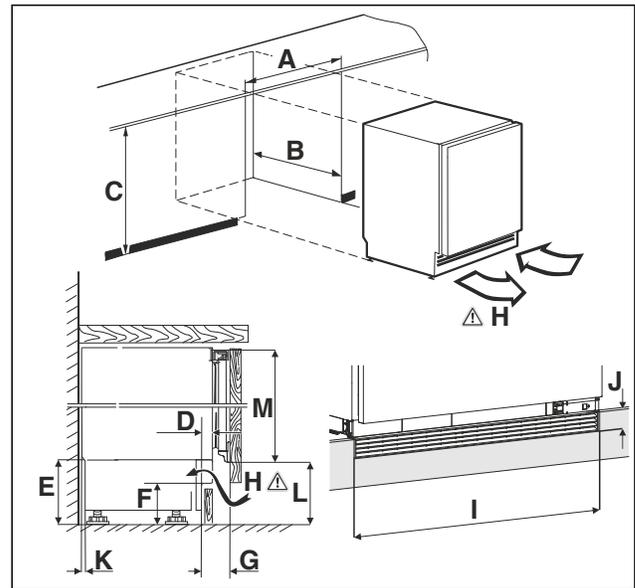


Fig. 2 Example illustration

- (A) Recess width
- (B) Recess depth
- (C) Recess height
- (H) Ventilation cross-section

A	600 mm (23 1/2 in)	
B	at least 560 mm (22 1/16 in)	
C	U.. 36..: ^{A)} 820 mm (32 5/16 in) to 880 mm (34 5/8 in)	U.. 37..: ^{A)} 860 mm (33 7/8 in) to 920 mm (36 1/4 in)
D	11 mm (7/16 in) to 66 mm (2 5/8 in)	
E	100 mm (3 15/16 in) to 160 mm (6 5/16 in)	
F	60 mm (2 3/8 in) to 120 mm (4 3/4 in)	
G	54 mm (2 1/8 in) to 109 mm (4 5/16 in)	
H	150 cm ² (24 in ²)	
I	600 mm (23 1/2 in)	
J	40 mm (1 9/16 in)	
K	18 mm (11/16 in)	

L	SDUFD 3603 / DURD 3600 / DuRd 3601: 99 mm (3 14/16 in) to 159 mm (5 1/4 in) SUFd 3603 / SUFNd 365i / SUFNh 3653 / URd 3600 / URh 3600 / URD 365i / URd 3601 / URh 365i: 104 mm (4 1/8 in) to 164 mm (6 7/16 in) URPh 365i / URPd 356i / SUFNpc 365i: 126 mm (4 15/16 in) to 186 mm (7 5/16 in) SUFnc 375i / SUFc 3703 / URc 3700 / URc 375i / URc 3701 / SUBa 375i / URh 375i / URPc 375i: 104 mm (4 1/8 in) to 164 mm (6 7/16 in)
M	SDUFD 3603 / DURD 3600 / DuRd 3601: 752 mm (29 5/8 in) SUFd 3603 / SUFNd 365i / SUFNh 3653 / URd 3600 / URh 3600 / URD 365i / URd 3601 / URh 365i: 705 mm (27 3/4 in) URPh 365i / URPd 356i / SUFNpc 365i: 680 mm (26 3/4 in) SUFnc 375i / SUFc 3703 / URc 3700 / URc 375i / URc 3701 / SUBa 375i / URh 375i / URPc 375i: 744 mm (29 5/16 in)

A) Appliance type designation

5 Cabinet front

5.1 Weight of cabinet front

NOTICE

Risk of damage from a heavy unit door!
 If the cabinet door is too heavy, damage to the hinges cannot be ruled out with functionality impairments as a result.

► Before installing the cabinet door, ensure that the cabinet door does not exceed the permissible weight.

Recess height	Maximum weight of unit door
.. 36.. ^{A)}	10 kg (22.05 lb)
.. 37.. ^{A)}	10 kg (22.05 lb)

A) Appliance type designation

5.2 Cabinet door

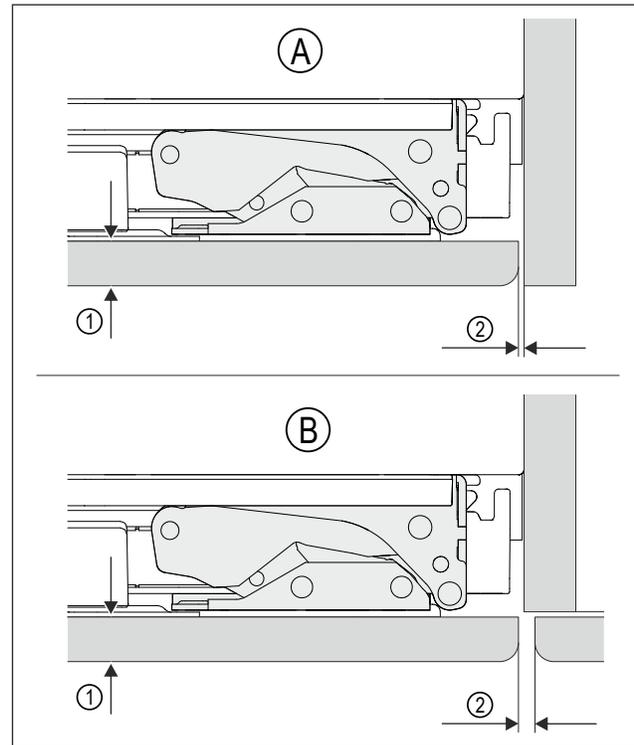


Fig. 3 Example illustration

- (A) Recess with wall (1) Front thickness
 (B) Recess with adjacent cabinets (2) Gap dimension

Front thickness	at least 16 mm (5/8 in) to maximum 19 mm (3/4 in)
Gap dimension	at least 3 mm (1/8 in)
The cabinet door must be flush and mounted with no tension.	

5.3 Cabinet front dimension

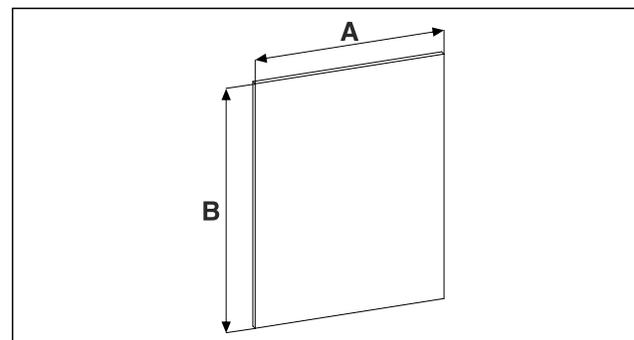


Fig. 4

Recess height	.. 36..	.. 37..
A	595 mm (23 7/16 in)	

Transporting the appliance

Recess height	.. 36..	.. 37..
B	At least 711 mm (28 in), maximum value must not exceed the maximum ventilation cross-section of 150 cm ² (24 in ²).	At least 757 mm (29 13/16 in), maximum value must not exceed the maximum ventilation cross-section of 150 cm ² (24 in ²).

A) Appliance type designation

5.4 Decorative panel dimensions

The decorative panel is inserted into the frame that is pre-mounted on the support plate. The support plate is delivered with the appliance. The support plate with decorative panel is then mounted together on the appliance.

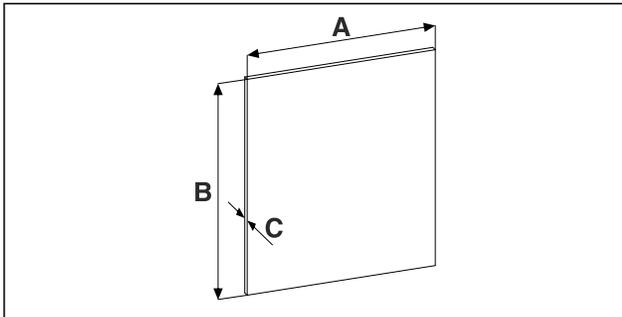


Fig. 5

Recess height	.. 36..
A	585 mm (23 in)
B	678 mm (26 11/16 in)
C	maximum 4 mm (1/8 in)

A) Appliance type designation

6 Transporting the appliance

6.1 Transporting the appliance for initial installation

Make sure that the following requirements are fulfilled:

- Appliance is packaged.
- The appliance is upright.
- ▶ Have two people transport the appliance.
- ▶ Unpack the appliance. (see 7 Unpacking the appliance)

6.2 Transporting the appliance after initial installation

Observe the following instructions if you want to transport or move the appliance after initial installation.

Make sure that the following requirements are fulfilled:

- Appliance is empty.
- The appliance is upright.
- Appliance with door(s): The door is secured against undesired opening.
- Appliance with pull-out cart: The pull-out cart is secured against undesired opening.
- Appliance is unpacked.
- ▶ Have two people transport the appliance.

7 Unpacking the appliance

NOTICE

Risk of damage for the finished floor surface!

- ▶ Protect the finished floor surface before you uncrate the unit.

If the appliance is damaged check with the supplier immediately before connecting it.

- ▶ Check the appliance and packaging for damage during transport. If you suspect any damage, please contact your supplier immediately.
- ▶ Remove all materials that could prevent it from being installed properly or prevent proper ventilation from the back or the side panels of the appliance.
- ▶ Remove all protective films from the appliance. Do not use sharp or pointed objects for this.

8 Disposal of packaging



WARNING

Danger of suffocation from packaging materials and films!

- ▶ Do not allow children to play with packaging materials.

The packaging is made from recyclable materials:

- Corrugated card/cardboard
- Parts made of foamed polystyrene
- Films and bags from polyethylene
- Packing bands from polypropylene
- Wood frame nailed together with a polyethylene window*
- ▶ Take the packaging material to an official collection point.

9 Changing the door hinge

9.1 Safety instructions



WARNING

Risk of injury if the door is not reversed correctly!

- ▶ Have a specialist change the door hinge.



WARNING

Risk of injury and material damage from the door weight!

- ▶ Only replace the door hinge if you are able to carry a weight of 15 kg (33.07 lb).
- ▶ Have two people replace the door hinge.

NOTICE

Live parts!

Damage to electrical components.

- ▶ Pull the power plug before changing the door hinges.

9.2 Tool



9.3 Removing the covers

- ▶ Open the door.

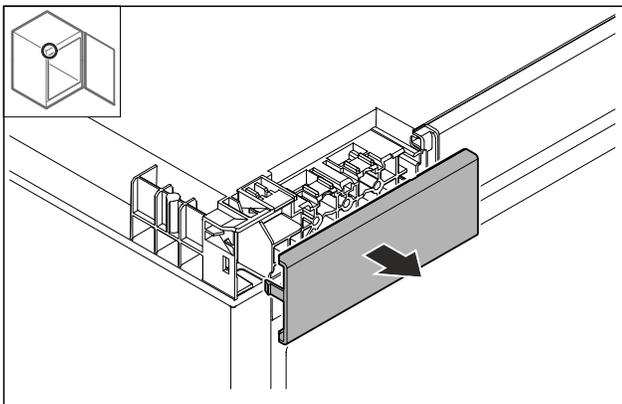


Fig. 6

- ▶ Remove the cover.

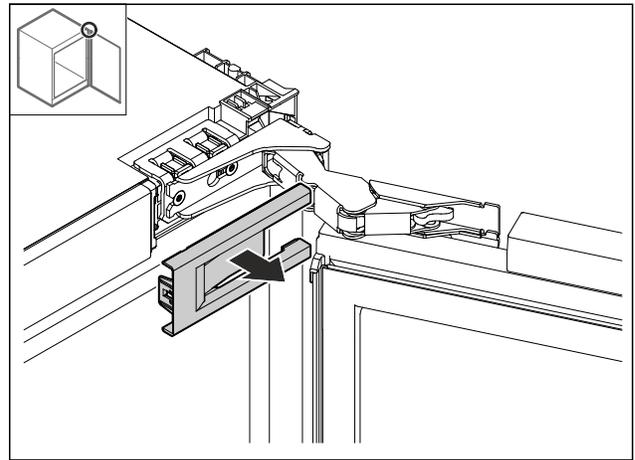


Fig. 7

- ▶ Remove the cover.

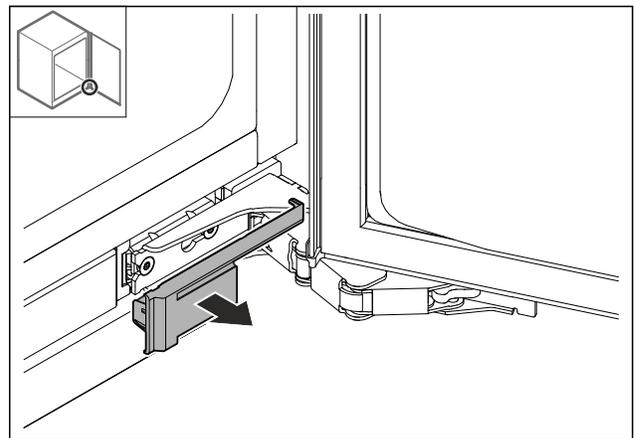


Fig. 8

- ▶ Remove the cover.

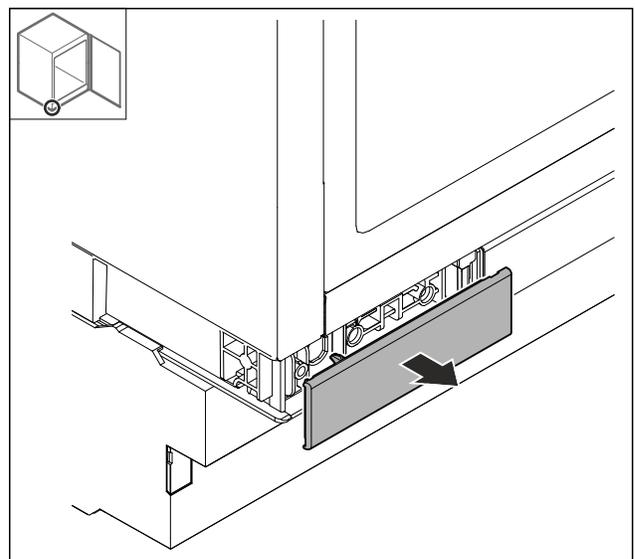


Fig. 9

- ▶ Remove the cover.

Changing the door hinge

9.4 Removing the door

NOTICE

Risk of injury if the door tips out!

► Hold the door.

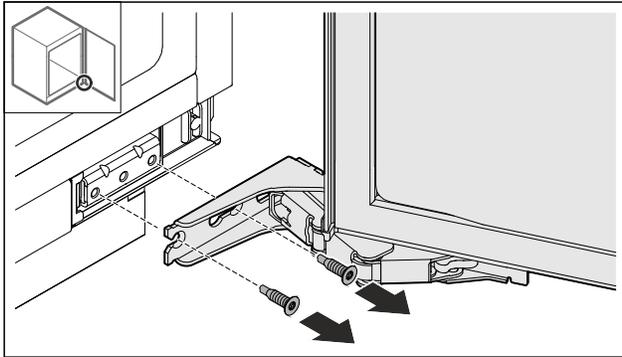


Fig. 10

► Remove the screws.

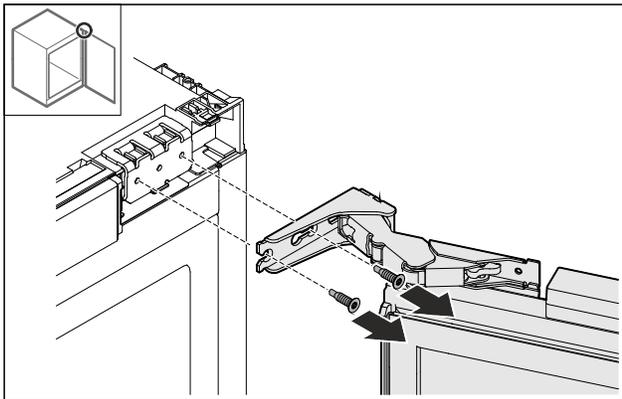


Fig. 11

- Remove the screws.
- Remove the door.
- Place the door on a soft support.

9.5 Pulling off the hinges

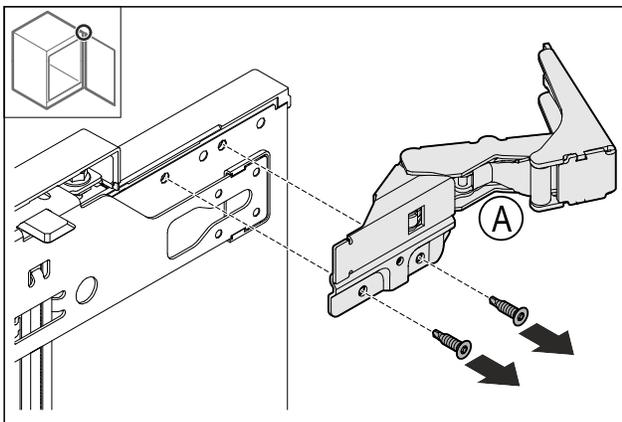


Fig. 12

► Remove the screws.

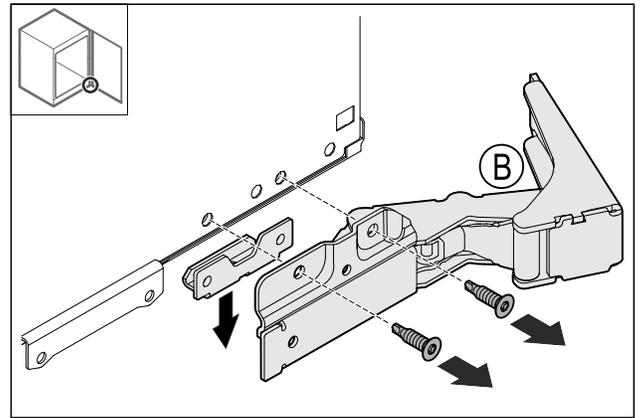


Fig. 13

► Remove the screws.

9.6 Moving the mounting bracket

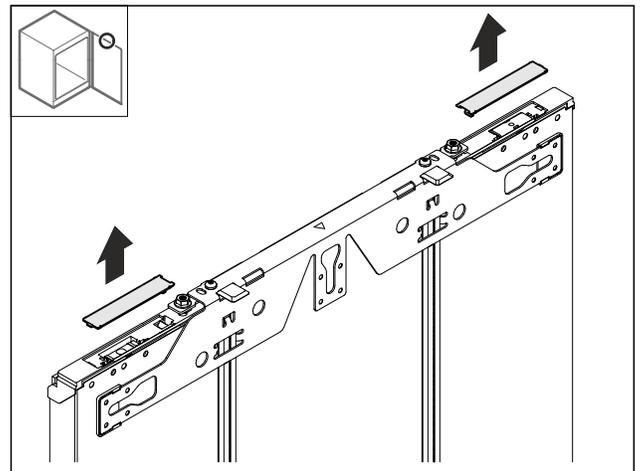


Fig. 14

► Pull off the covers.

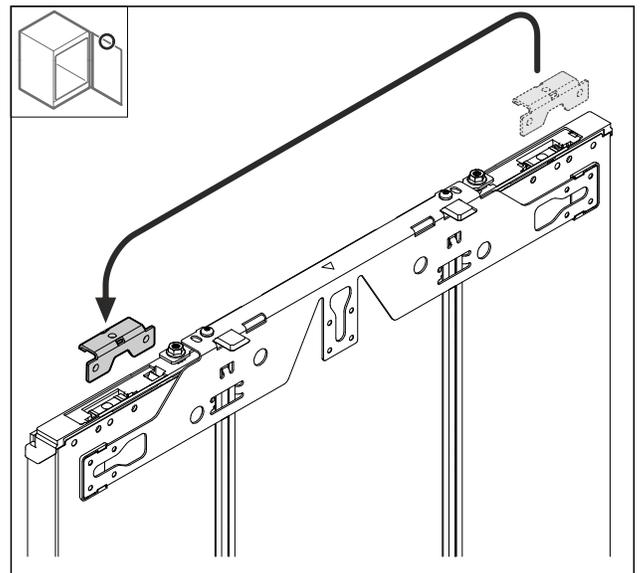


Fig. 15

► Move the bracket.

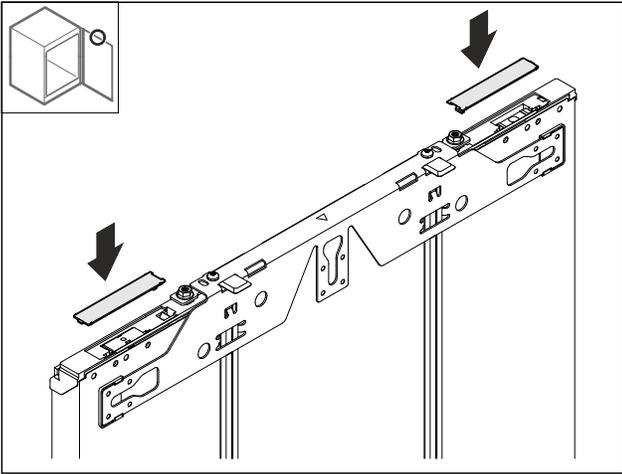


Fig. 16

► Attach the covers.

9.7 Attaching the hinges

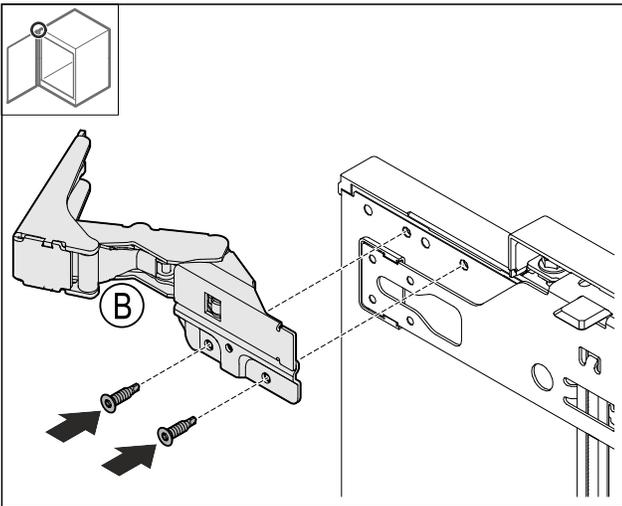


Fig. 17

► Screw on the hinge.

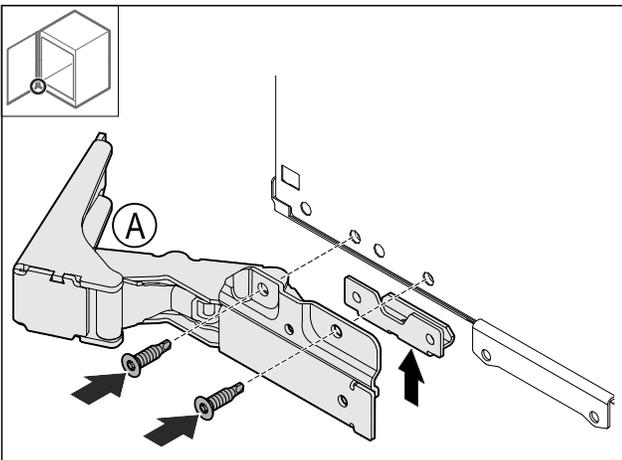


Fig. 18

► Screw on the hinge.

9.8 Moving the top bracket

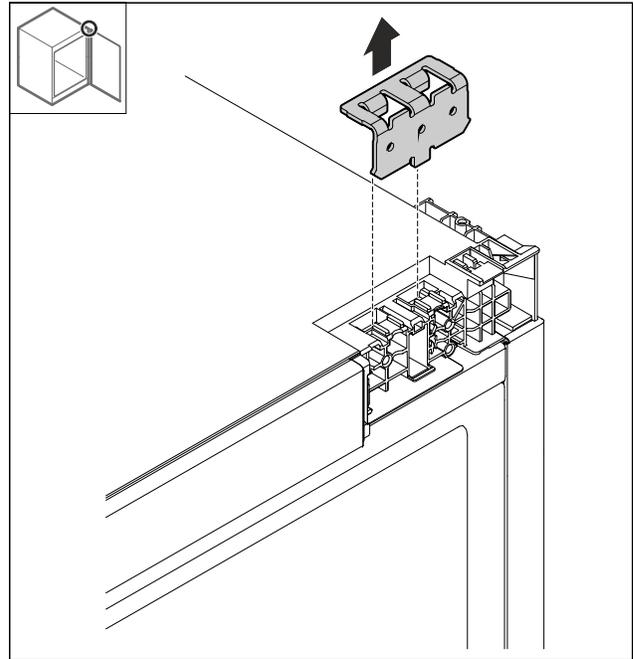


Fig. 19

► Remove the bracket.

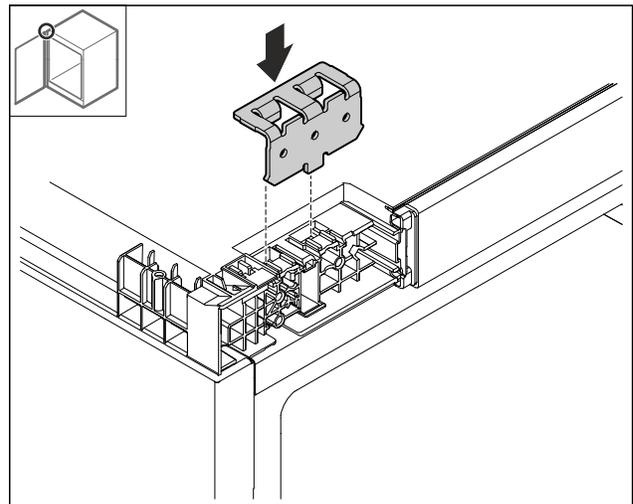


Fig. 20

► Insert the bracket.

Changing the door hinge

9.9 Moving the bottom bracket

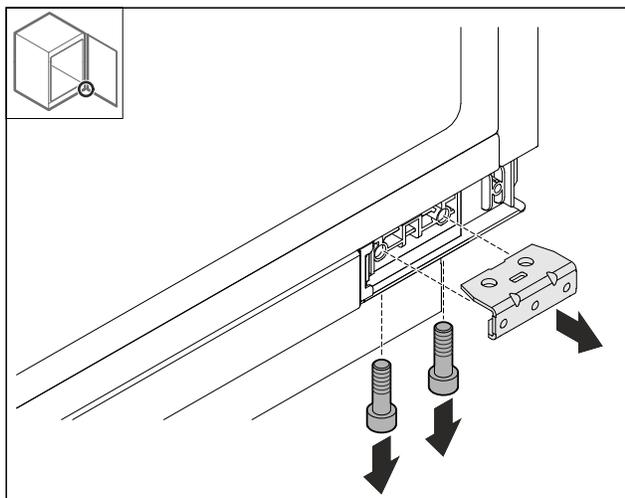


Fig. 21

► Pull off the bracket.

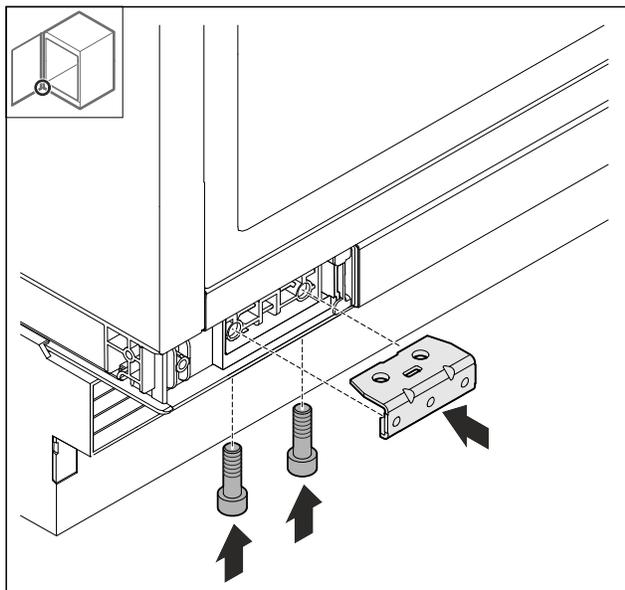


Fig. 22

► Mount the bracket.

9.10 Moving the bottom bracket

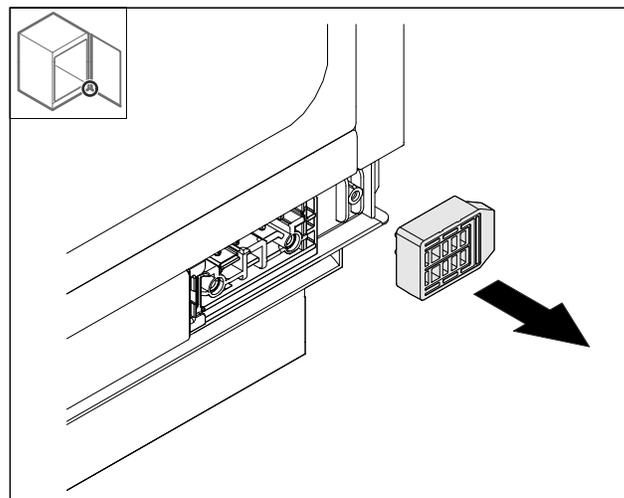


Fig. 23

► Remove the bracket.

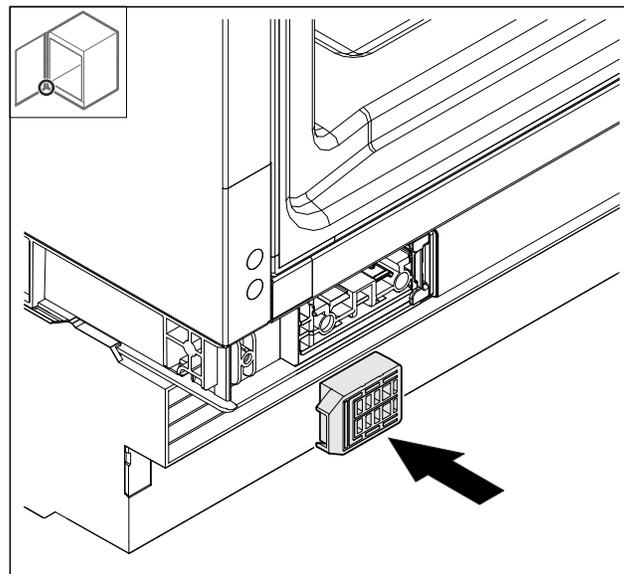


Fig. 24

► Insert the bracket.

9.11 Installing the door

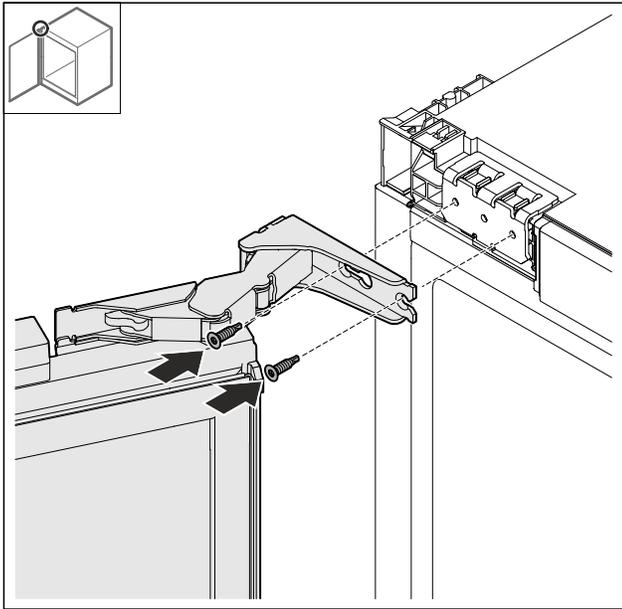


Fig. 25

► Screw on the door at the top.

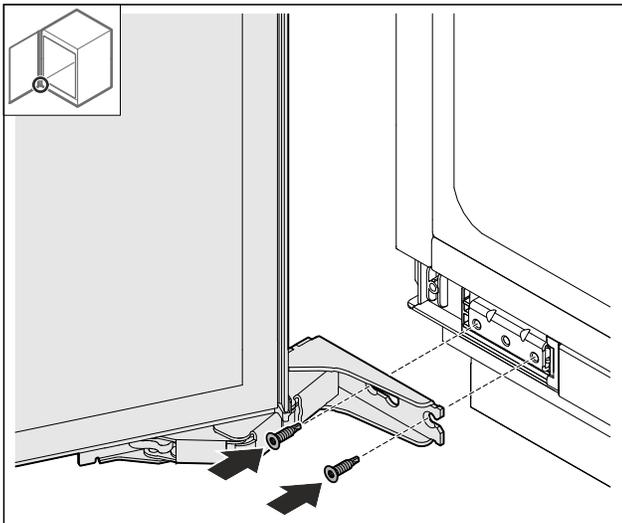


Fig. 26

► Screw on the door at the bottom.

9.12 Putting on the covers

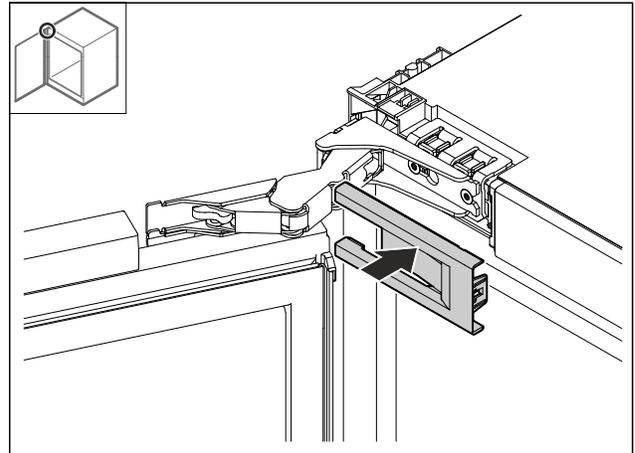


Fig. 27

► Put on the cover.

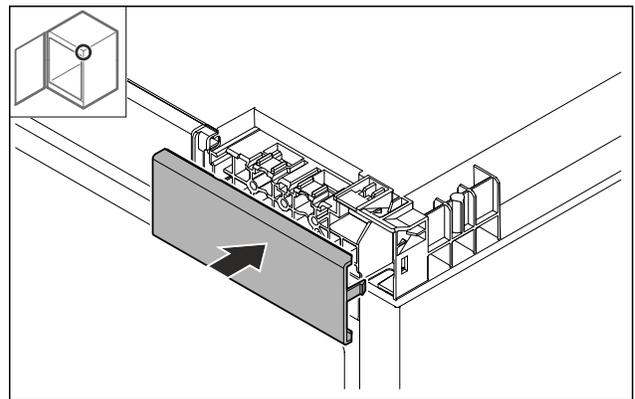


Fig. 28

► Put on the cover.

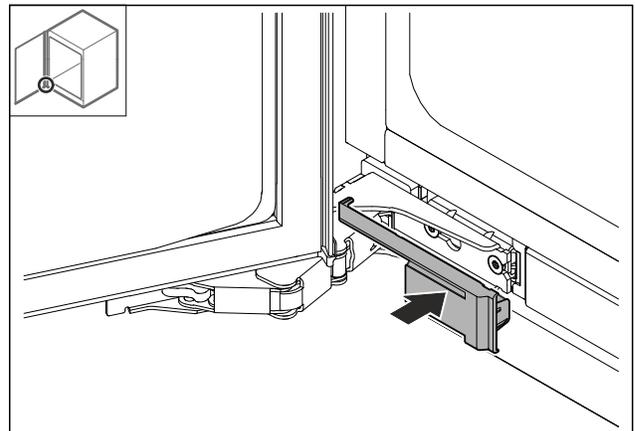


Fig. 29

► Put on the cover.

Recessed installation

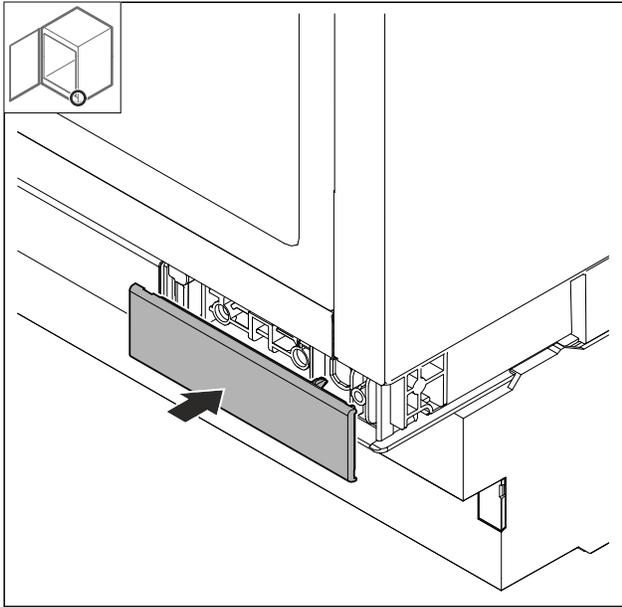


Fig. 30

- ▶ Put on the cover.

10 Recessed installation

10.1 Tool

Make sure that the following tools are available:

- Torx® 20
- Slotted screwdriver
- Measuring tape
- Pencil
- String
- Level

Before pushing the appliance into the recess, observe the fastening method:

Lateral fastening	Ceiling fastening
Substructure under hard countertop such as granite	No granite plate
The appliance is lower than the countertop when the adjustable feet are fully extended.	The appliance sits slightly braced under the countertop when the adjustable feet are fully extended.
Unit side panel is available for screwing.	

10.2 Preparing the appliance

Make sure that the following requirements are fulfilled before you install the appliance in a recess:

- The door hinge has been mounted. You can only mount the door hinge outside of the recess, because you need sufficient space to do so.

- ▶ Insert the IEC socket of the power cable completely into the appliance plug on the rear side of the appliance.
- ▶ Ensure the IEC socket is firmly in place.
- ▶ Use a string to route the power plug to a socket outlet that is freely accessible.



Fig. 31

NOTICE

Risk of damage when moving the appliance!

When moving the appliance, you may damage the floor or the appliance's adjustable feet may break off.

Before moving it:

- ▶ Turn the adjustable feet in fully.
- ▶ Place one strip of cardboard (e. g. from the packaging) under each adjustable foot with approx. 100 mm (3 5/16 in) x 600 mm (23 1/2 in).

While moving:

- ▶ Move the appliance carefully.
- ▶ If the floor is not level: Lift the appliance carefully.

After moving it:

- ▶ Remove the cardboard strips.

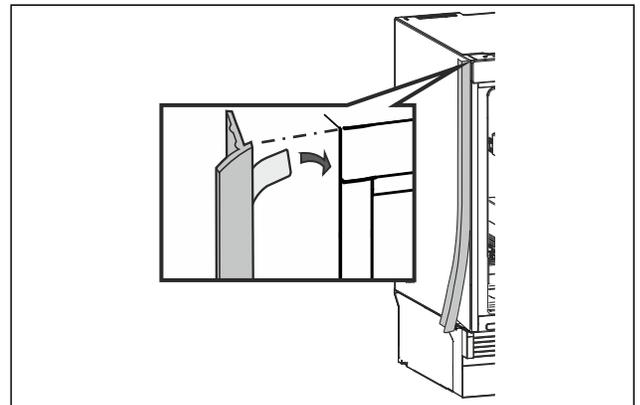


Fig. 32 Example illustration

- ▶ For 600 mm (23 1/2 in) wide recess: Do not use piping.
- ▶ For 610 mm (24 in) wide recess: Attach piping to the side.
 - Appliance rests against neighboring unit on the right: Install piping on the left.
 - Appliance rests against neighboring unit on the left: Install piping on the right.
- ▶ Place the piping at the top below the upper edge and glue it to the side panel. Do not shorten the piping.

10.3 Fastening the appliance to the ceiling

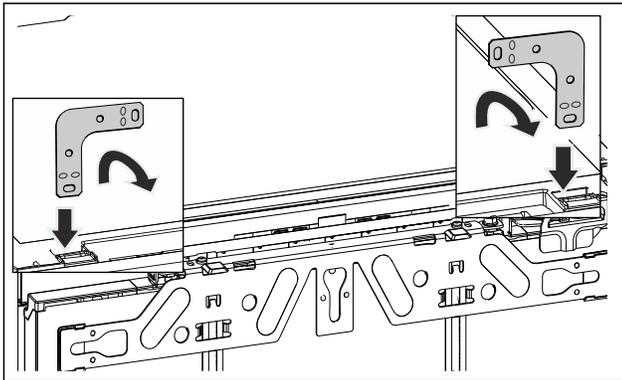


Fig. 33 Example illustration

- ▶ Insert the bracket into the opening in the appliance ceiling and bend it forward.



WARNING

Risk of fire from short circuit!

- ▶ If you are pushing the appliance into the recess: Do not kink, trap, or damage the power cable.
- ▶ Do not operate the appliance with a defective power cable.

- ▶ Push the appliance into the recess and align it, see point (see 10.5 Leveling out the appliance).

10.4 Fastening the appliance laterally

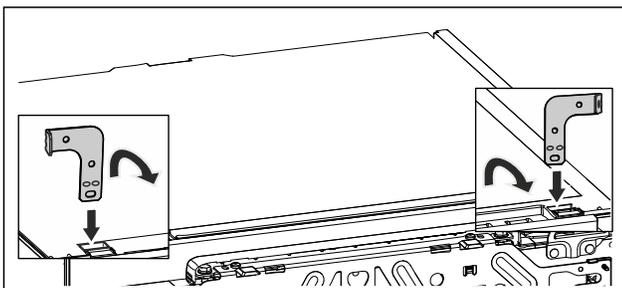


Fig. 34 Example illustration

- ▶ Bend both brackets at one end before installing. Insert the straight side into the opening in the appliance ceiling and bend it forward.



WARNING

Risk of fire from short circuit!

- ▶ If you are pushing the appliance into the recess: Do not kink, trap, or damage the power cable.
- ▶ Do not operate the appliance with a defective power cable.

- ▶ Push the appliance into the recess and align it, see point (see 10.5 Leveling out the appliance).

10.5 Leveling out the appliance

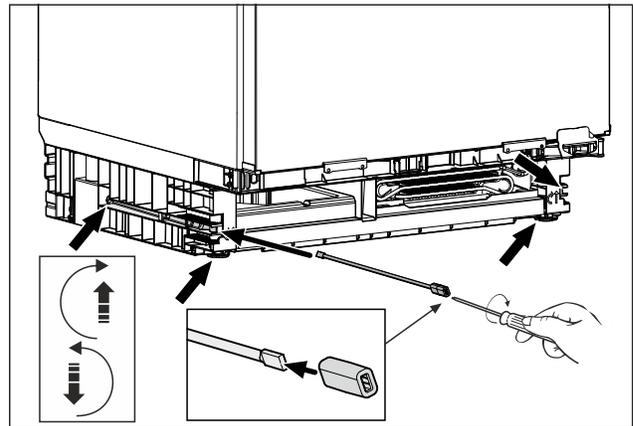


Fig. 35 Example illustration

- ▶ Unscrew the adjustable feet to below the worktop.
- ▶ Align the appliance so it stands up straight using a level.
- ▶ Keep the rod with adapter piece for dismantling the appliance.

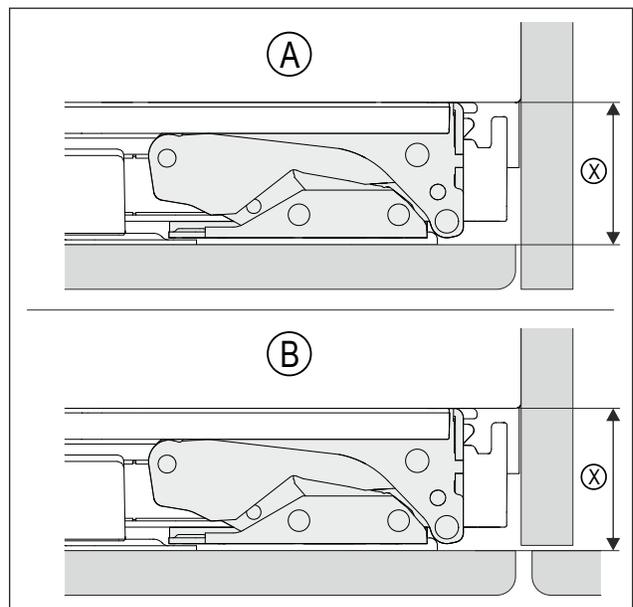


Fig. 36 Example illustration

(A) Recess with wall

(X) Is the distance between the appliance body and the rear side of the mounted cabinet front

(B) Recess with adjacent cabinets

- ▶ Check to ensure that the distance (X) corresponds to the installation situation (A) or (B).

(X)	42 mm (1 5/8 in)
-----	------------------

If there is no unit side panel, use the worktop as a guide.

Installing the unit door

- ▶ Unscrew the adjustable feet alternately to the maximum. The maximum adjustment range is 60 mm (2 3/8 in).
- ▶ The appliance is aligned so it stands up straight.
- ▶ The appliance is slightly braced in the recess between the floor and worktop.

10.6 Installing the base

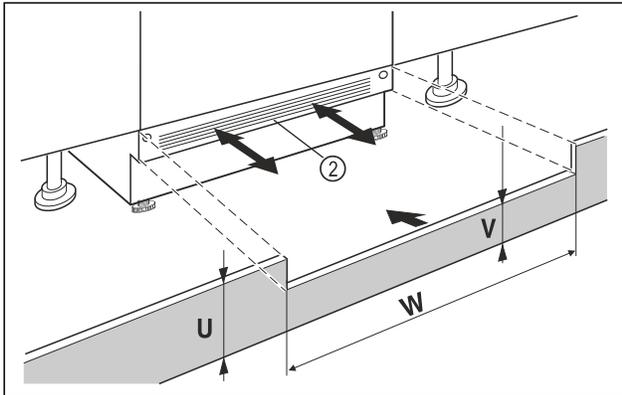


Fig. 37 Example illustration

- ▶ Put on the appliance base cover Fig. 37 (2) but do not fix it yet.
 - ▶ Position the unit door and unit base cover for testing
 - ▶ If the base cover Fig. 37 (2) is visible, pull it so far forward that the front edge of the ventilation grille and the unit base cover form one level.
- or-**
- ▶ If the base cover is concealed Fig. 37 (2), push it all the way back.
 - ▶ Ensure that the ventilation slots are completely free: If necessary, cut the height of the unit base cover Fig. 37 (U) to size!
 - ▶ Adjust the bar height Fig. 37 (V) under the appliance base cover Fig. 37 (2) along the recess width Fig. 37 (W).

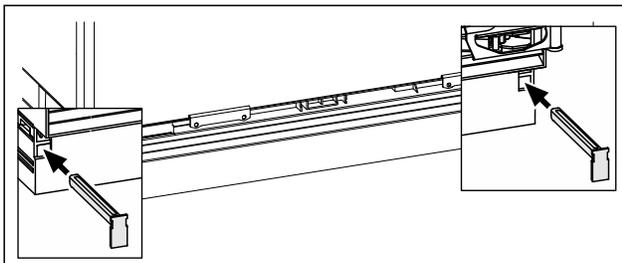


Fig. 38 Example illustration

- ▶ Fix the appliance base cover: Insert the latch while holding the appliance base cover.
- ▶ Fasten the unit base cover.

10.7 Fastening the appliance in the recess

Ceiling fastening:

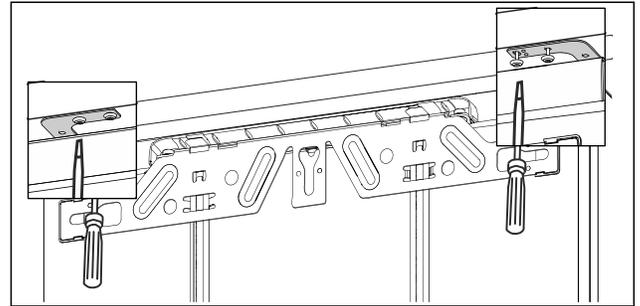


Fig. 39 Example illustration

- ▶ For fastening under the worktop, screw on the mounting brackets with two screws each underneath the worktop.

Lateral fastening:

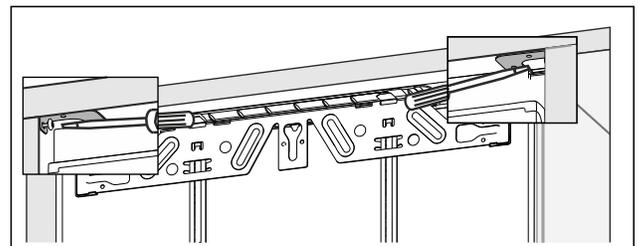


Fig. 40 Example illustration

- ▶ For lateral fastening, screw the mounting bracket into the recess with one screw each on the right and left.

11 Installing the unit door

- ▶ Attach the handle to the cabinet door.

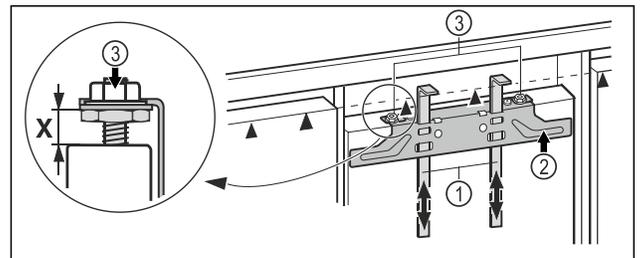


Fig. 41

- ▶ Check the presetting of $X = 8 \text{ mm (5/16 in.)}$. (Distance between appliance door and lower edge of crossbeam)
- ▶ Push the assembly aids Fig. 41 (1) up to the height of the unit door. Lower stop edge ▲ of the assembly aid = upper edge of the cabinet door to be mounted.
- ▶ Unscrew the fastening crossbeam Fig. 41 (2) using the lock nuts Fig. 41 (3).

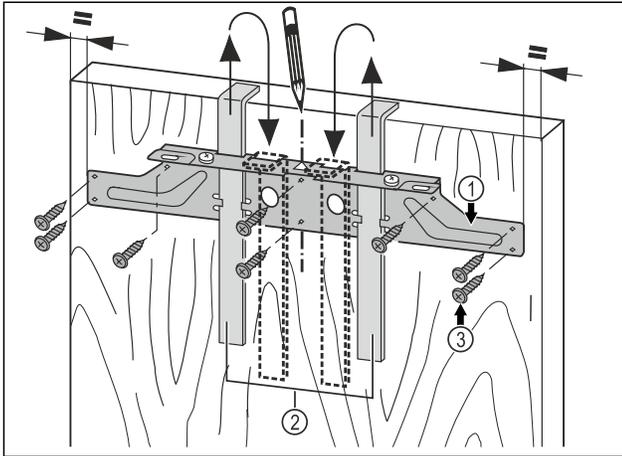


Fig. 42

- ▶ Hang the fastening crossbeam Fig. 42 (1) with the assembly aids Fig. 42 (2) on the inside of the unit door.
- For 600 mm (23 1/2 in) wide recess:
- ▶ Align the fastening crossbeam Fig. 42 (1) in the center of the door.

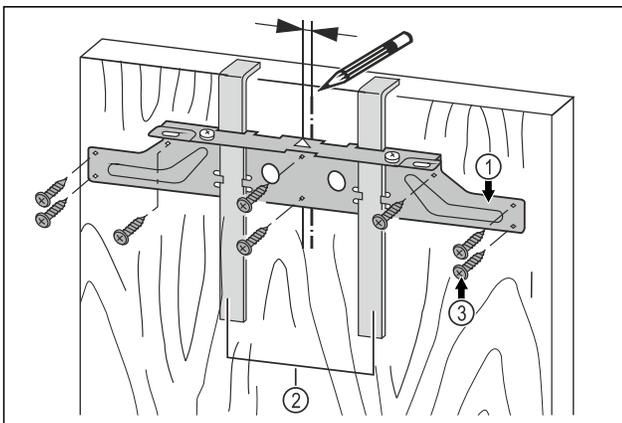


Fig. 43

- For 610 mm (24 in) wide recess:
- ▶ Align the fastening crossbeam Fig. 43 (1) in the center of the door.
- ▶ Left piping: Move the fastening crossbeam Fig. 43 (1) 6 mm (1/4 in) to the left.
- or-
- ▶ Right piping: Move the fastening crossbeam Fig. 43 (1) 6 mm (1/4 in) to the right.

For particle board doors:

- ▶ Screw down the fastening crossbeam Fig. 42 (1) with at least 6 screws Fig. 42 (3).

For panel doors:

- ▶ Screw down the fastening crossbeam Fig. 42 (1) to the edge with 4 screws Fig. 42 (3).
- ▶ Pull out the assembly aids Fig. 42 (2) upwards and insert them rotated into the adjacent openings.

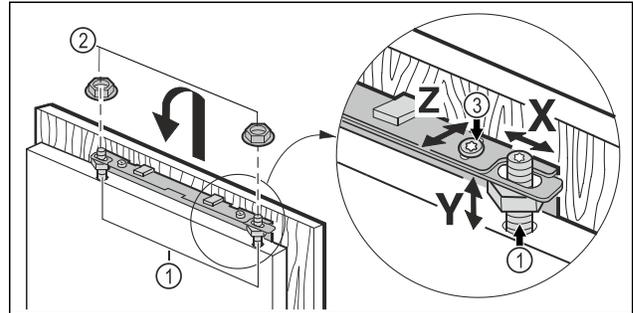


Fig. 44

- ▶ Hang the unit door on the adjustment bolts Fig. 44 (1) and screw the lock nuts Fig. 44 (2) loosely onto the adjustment bolts.
- ▶ Close the door.
- ▶ Check the door spacing to the surrounding unit doors.
- ▶ Align the unit door laterally: Move the unit door in X direction.
- ▶ Align the height Y and lateral inclination of the unit door: Set the adjustment bolts Fig. 44 (1) with a screwdriver.
- ▶ The unit door is flush and aligned with the surrounding cabinet fronts.
- ▶ Tighten the lock nuts Fig. 44 (3).

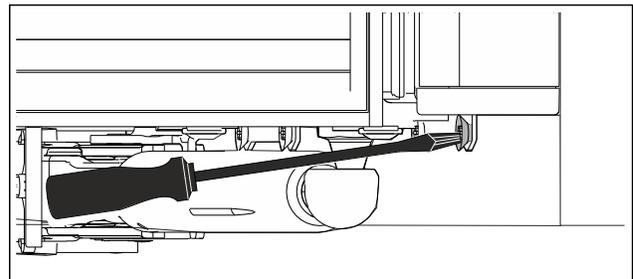


Fig. 45

- ▶ Screw the unit door to the appliance door.
- ▶ Pre-drill the mounting holes in the unit door (if necessary, pre-punch with a graver).
- ▶ Screw the appliance door to the unit door using screws through the mounting brackets.

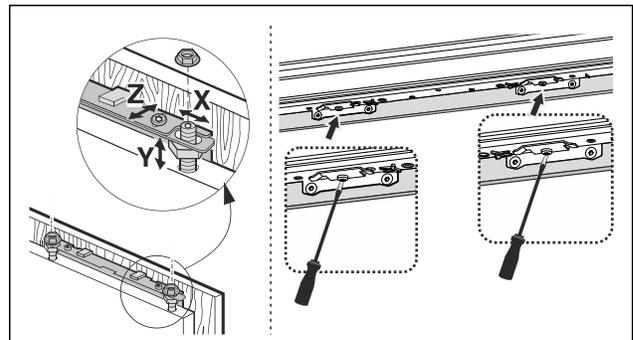


Fig. 46

- ▶ Align the unit door in depth Z : release the screws at the top and bottom of the door, then move the door.
- ▶ To make it easier to reach the screws under the door, open the door approx. 45°.

Connecting the appliance to the power supply

- ▶ Do not let the knobs and sealing lips touch - this is important for the function!
- ▶ Set an air gap of 2 mm (1/16 in) between the unit door and cabinet carcass.

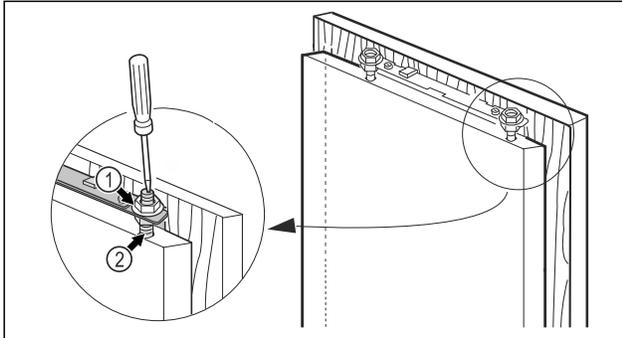
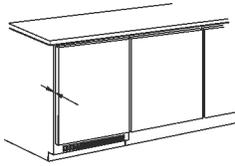


Fig. 47

- ▶ Check the fit of the door and readjust if necessary.
- ▶ Tighten all screws.
- ▶ Tighten the lock nuts Fig. 47 (1) with a hexagon wrench 13, holding the adjustment bolt Fig. 47 (2) with a screwdriver.

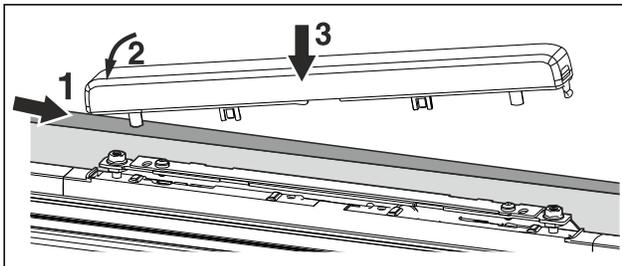


Fig. 48

- ▶ Put on the top cover and snap it in place.

12 Connecting the appliance to the power supply



WARNING

Danger of electric shock and injury due to damaged appliance or damaged mains cable!
Cuts and fatal injury. If the appliance or the mains cable is damaged during transport, you may be electrocuted. You could also cut yourself on damaged parts of the appliance housing.

- ▶ Check the appliance and the mains cable for damage after transport.
- ▶ Never put the appliance into operation if the appliance or the mains cable are damaged.
- ▶ Contact Customer Service.

You can connect your appliance to the mains using the power cable supplied separately. The mains power cable has an appliance coupler at one end and a mains plug at the other end.

Make sure that the following requirements are fulfilled:

- The appliance and power cable are undamaged.
- The appliance is installed in accordance with the regulations. (see 10 Recessed installation)
- Requirements for the electrical connection are met. (see 2 Installation conditions)
- Dimensions for connection in accordance with regulations are known and observed.
- Mains voltage and frequency correspond to the specifications on the type plate.
- The socket is grounded and fused in accordance with regulations.
- The tripping current for the fuse is between 10 A and 16 A.

NOTICE

Danger of damage to incorrect operation!
Damage to the electrical components of the appliance.

- ▶ Only use the supplied power cable.




WARNING

Danger of fire due to incorrect connection!
Burns.

Damage to the appliance.

- ▶ Do not use an extension cord.
- ▶ Do not use a multipoint connector strip.

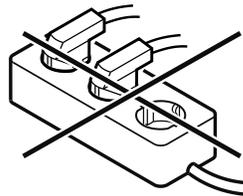

NOTICE

Danger of damage to incorrect connection!
Damage to the appliance.

- ▶ Do not connect the appliance to a stand-alone inverter, e.g. solar power systems and petrol generators.

- ▶ Connect the mains plug of the power cord to the power supply. Ensure the main plug is firmly plugged into the outlet.
- ▶ If no action is taken within 60 seconds: Standby symbol fades or disappears.*
- ▶ Appliance is connected. For initial commissioning, see the next chapter or the operating instructions.



home.liebherr.com/fridge-manuals

EN Under-worktop refrigerators and freezers

Issue date: 20260209

Part number index: 7083757-00

For Service in the U.S.: Liebherr Service Center
Toll Free: 1-866-LIEBHER or 1-866-543-2437
Service-appliances.us@liebherr.com
PlusOne Solutions, Inc.
3501 Quadrangle Blvd, Suite 120
Orlando, FL 32817

For Service in Canada: Liebherr Service Center
Toll Free: 1-888-LIEBHER or 1-888-543-2437
www.euro-parts.ca
EURO-PARTS CANADA
39822 Belgrave Road, Belgrave, Ontario, N0G 1E0
Phone: (519) 357-3320 | Fax: (519) 357-1326